



#### How to program Keypad for Gate Opener:

1. Press button “ LEARN” on Control Panel of Gate Opener on the Gate #1;
2. A LED on control panel will be light and then turn off;
3. Input password, press button ◀; ( the initial password is 11 )
4. LED start to flash and then turn off;
5. Programming finish.
6. Input password & press button ◀ to open the gate #1.

#### How to program Keypad to Gate #2 ( max 100 remotes ):

1. Press button “ LEARN” on Control Panel of Gate #2;
2. A LED on control panel will be light and then turn off;
3. Input password, press button ▶; ( the initial password is 22 )
4. LED start to flash and then turn off;
5. Programming finished.
6. Input password & press button ▶ to open the gate #2.

#### How to change password to Gate #1:

1. Press button “0” and hold it;
2. Press button ◀;
3. Release button ◀, release button “0”;
4. Input current password, press button ◀;
5. Input new password ( max 8 digits ), press button ◀;
6. Re-input new password, press button ◀;
7. Changing finished.

#### How to change password to Gate #2:

1. Press button “0” and hold it;
2. Press button ▶;
3. Release button ▶, release button “0”;
4. Input current password, press button ▶;
5. Input new password ( max 8 digits ), press button ▶;
6. Re-input new password, press button ▶;
7. Changing finished.