

URC-A6 Remote Control

Owner's Manual



UNIVERSAL[®]
remote control

The Pioneer in Control Technology

Congratulations!

Congratulations on purchasing Universal Remote Control's URC-A6 Pre-Programmed and Learning remote control. You now have the power to control your entire home entertainment system with one easy-to-use remote. The URC-A6 can be used with thousands of audio/video components because of the extensive library of codes that have already been programmed into the remote. So... get ready to sit back, relax, and simplify your home entertainment experience.

This Owner's Manual is designed to assist you in programming your URC-A6 remote to work with your components by guiding you through an easy step-by-step process. Everything you need to know about programming the URC-A6 is contained in this Manual.

URC-A6 Owner's Manual © 2009 Universal Remote Control, Inc.

This document is protected by the copyright laws of the United States and internationally by the Berne Convention. No part of this manual may be reproduced in any form without the express written consent of Universal Remote Control, Inc. Although reasonable care has been taken to assure the accuracy of the information herein contained, Universal Remote Control, Inc. is not responsible for operational, technical or editorial errors or omissions.

The specifications and information in this manual may be subject to change without notice.

MacroPower and SimpleSound are trademarks of Universal Remote Control, Inc. Entertainment Made Simple is a registered trademark of Universal Remote Control, Inc. All other brand or product names are trademarks or registered trademarks of their respective owners.



500 Mamaroneck Avenue, Harrison, NY 10528
Phone: (914) 835-4484 Fax: (914) 835-4532

Table of Contents

Getting Started - Overview

- Control up to 6 Components4
- Component Buttons4
- Battery Installation4
- Low Battery Warning5
- Couch Mode5

Keypad Layout & Button Functions...6

Programming URC-A6 Using Pre-Programmed Codes7

- Quick Set-Up Method7
- Three-Digit Code Entry Method8
- Auto-Search Method10

Programming URC-A6 Using the Learning Method.....12

Special Advanced Features14

- Programming Automated Activities14
- MacroPower Total System On/Off.....14
- Programming Multi-Commands to Macro Buttons16
- "My Favorites" – Favorite Channels17
- More Favorite Channels.....18
- SimpleSound™ Total System Volume Control19
- Channel Control "Punch Through"21
- Transport Control "Punch Through"22
- OSD (On-Screen Display) Control "Punch Through"23
- Input Switching Macros24

Erasing Commands-Overview25

- Erasing a Single Learned Command25
- Erasing All Learned Commands from One Component26
- Erasing MacroPower & Other Macro Commands27
- Erasing SimpleSound & Other "Punch Through" Commands28
- Factory Reset29

Finding a Component's Set-Up Code Number30

Pre-Programmed Code Tables31

- CABLE/SAT32
- TV33-34
- DVD/DVR/VCR35
- AUDIO36
- AUX37
- LIGHTS38

FAQs39

Warranty40

Specifications40

Getting Started - Overview

Control up to 6 Components

The URC-A6 remote control is designed to control up to six different Audio/Video components and operate virtually all brands of AUDIO, TV, DVD/DVR/VCR, CBL/SAT, LIGHTS and AUX(Game, Music server, etc.) components.

Component Buttons


Once you have programmed the URC-A6 for all of your components, all you need to do is press a component button and all the buttons on the URC-A6 will work with that component. For example, when you press the TV component button, all the buttons on your URC-A6 will operate your TV. If you press the DVD component button, all the buttons on the URC-A6 will operate your DVD.

Each time you press any of the buttons on the remote, the LED light in the component button will light up to indicate which component you are controlling.



Battery Installation

Press the tab and remove the cover of the battery compartment located in the back of your remote. Insert the two AAA batteries (included in the package) making sure to match the positive (+) and negative (-) symbols as shown in the diagram. Place the cover back over the battery compartment.

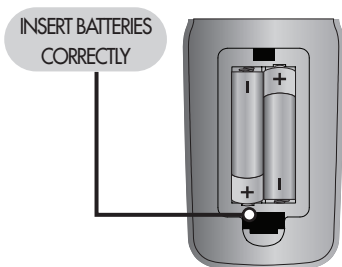

Low Battery Warning

When the batteries are low and need to be replaced the component LED will quickly blink three times when you press the Power [ON] button.

Couch Mode


The URC-A6 is designed to automatically turn itself off if a button is pressed for more than 30 seconds. This prevents battery power from being depleted should the remote accidentally slip between the couch cushions.

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

**PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER**

**IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com
or dial 1-800-901-0800
(9:00AM-6:00PM EST)**

Keypad Layout & Button Functions

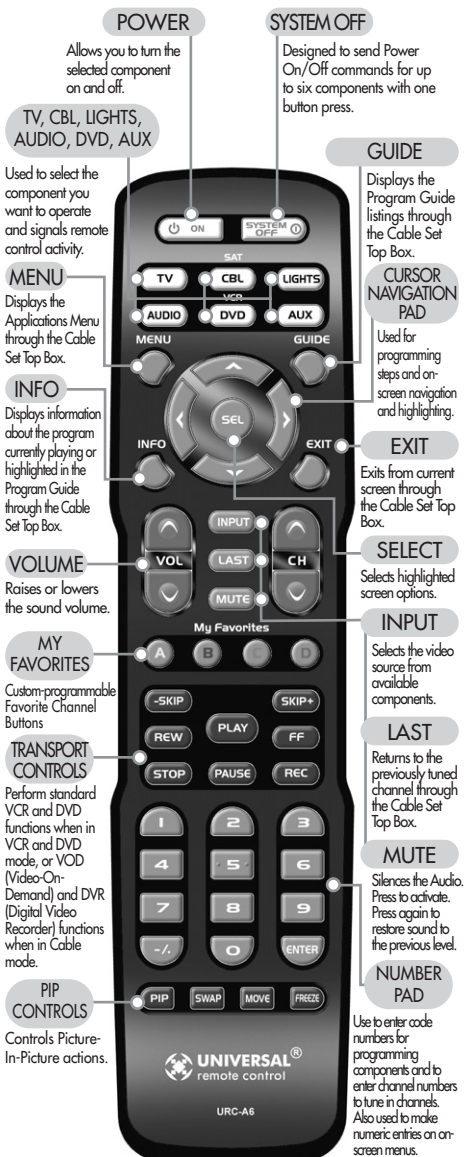

Programming URC-A6 using Pre-Programmed Codes

There are three different ways you can program your URC-A6 using the component brand codes that are pre-programmed into the remote. One of these will work for you!

- Quick Set-Up Method
- Three-Digit Code Entry Method
- Auto-Search Method

* * *

TRY THIS FIRST!


Quick Set-Up Method

STEP 1: Manually or using your old remote, turn on the component you want to program—for example, to program your TV, turn on your TV set.

STEP 2: Point the URC-A6 toward the component that you want to program (in this case the TV set) and press and hold the component button (in this case the TV button). **While holding down the component button,** begin to press numeric keys, one number at a time, starting from 1, continuing to 2, 3 ... 0 until component (in this case the TV) turns off.

STEP 3: Release the component button to save the code. The component LED light will blink three times to confirm that the code has been stored.

Repeat the above three steps for other components.

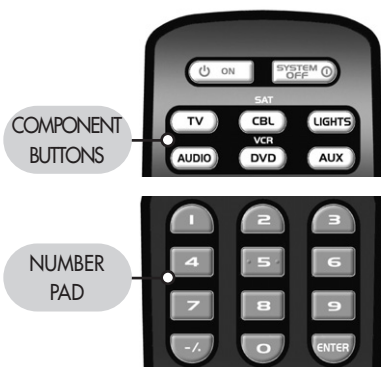

IF QUICK SET-UP DID NOT WORK, TRY THIS NEXT:

Three-Digit Code Set-Up Method


STEP 1: Find the 3-digit code numbers assigned to your brand from the lists in the back of this manual. The codes are listed by component category (i.e., TV, VCR, DVD, etc.), then by brand name. For instance, if you would like to locate a code for a Sony television, first locate the TV category and then look for the Sony brand.

STEP 2: Once you have located the 3-digit codes for each of the components that you wish to operate with your URC-A6, write them ALL down on a piece of paper. It's important that you write down all the codes listed for your brand because only one code is going to work with your component.

STEP 3: Manually or using your old remote, turn on the component you want to program—for example, to program your TV turn on your TV set.

STEP 4: On the URC-A6, press the Component button that you want to program (in this case the button that says TV) and the SELECT [SEL] button at the same time. Hold down both buttons for 2 seconds until the TV Component LED light turns on. This signals that you are in programming mode.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

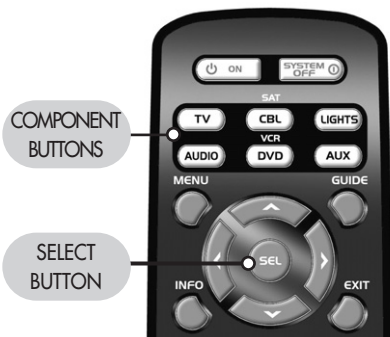

STEP 5: Point the URC-A6 toward the component (in this example the TV) and punch in the first 3-digit code that you wrote down for that specific component. Use the Number buttons 0–9 on the remote to punch in the code. The TV LED light will blink each time a number is pressed.



If the 3-digit code number you just punched in is the correct number, the component you are trying to program will turn off. If it did not turn off, enter the next code number from your list until it does turn off.

STEP 6: Once you've entered the code number and the component has turned off, press the POWER button on the URC-A6 remote to turn the component back on.

Next test the VOLUME and CHANNEL buttons (or PLAY and STOP buttons for DVD and DVR) to make sure they all work. For example, perhaps your Sony TV turned off with code number 147, but the volume controls did not work properly. In this case, try the next code number listed for that component. Repeat Step 5 using the next code number until you find a perfect match.

STEP 7: Once you've entered a correct code you must save it. Press the component button you just programmed (in this case TV) one more time to save the code number. The component LED light will blink three times to confirm that the code was successfully stored. Now when you press the TV component button, all of the buttons will work with your TV.

Program the remaining components by repeating steps 3 through 7.

IMPORTANT: If you have tried all the set-up codes in the list and the component still did not turn off after Step 5, either the Auto-Search Method (page 10) or the Learning Method (page 12) will help you program.

If the Three Digit Code did not work, try this next:


Auto-Search Method

The Auto-Search Method is a way you can scan through all of the codes in the table to find the right code for your component.

STEP 1: Manually or using your old remote, turn on the component you want to program—for example, to program your TV, turn on your TV set.

STEP 2: On the URC-A6, press the Component button that you want to program (in this case the button that says TV) and the SELECT [SEL] button at the same time. Hold down both buttons for 2 seconds until the TV Component button light turns on. This signals that you are in programming mode.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

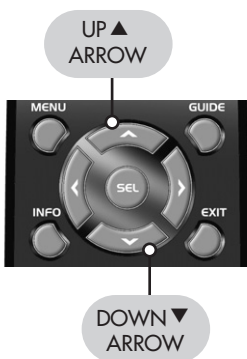

STEP 3: Point the URC-A6 remote control toward the component and press the UP ▲ arrow (or DOWN ▼ arrow) button once. Each time the UP or DOWN arrow button is pressed, the code will count up (or down) one code number and send a Power OFF signal. When the correct code is sent out, the component will turn off.

STEP 4: Once you have found the right code number and the component has turned off, press the POWER button on the URC-A6 remote to turn the component back on.

Next test the VOLUME and CHANNEL buttons (or PLAY and STOP buttons for DVD and DVR) to make sure they all work. If any of the buttons do not work properly, you need to find a new code. Continue pressing the UP (or DOWN) arrow button until you find a new code that turns off the component and makes the VOLUME or PLAY buttons respond correctly.

STEP 5: Once you have found the right code, you must save it. Press the component button you just programmed (in this case TV) one more time to save the code number. The component LED light will blink three times to confirm that the code was successfully stored. Now when you press the TV component button, all of the buttons will work with your TV.

NOTE: Use this method for those components you cannot program with either the Quick Set-Up or 3-digit Code Entry Methods.

IMPORTANT: If you cannot find the right code after 5 minutes of trying the Auto-Search Method, try the Learning Method (page 12).

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

**PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER**

**IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com
or dial 1-800-901-0800
(9:00AM-6:00PM EST)**

If Auto Search did not work, try this:

Programming URC-A6 using the Learning Method

STEP 1: Line up the URC-A6 to the remote control you want to 'learn' from, head-to-head as shown below. Make sure the heads are one to two inches apart.



STEP 2: On the URC-A6, press the Component button that you want to program (in this case the button that says TV) and the ENTER [ENT] button at the same time. Hold down both buttons for 2 seconds until the TV Component button light turns on. This signals that you are in programming mode.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 3: Press any button on the URC-A6 that you want to teach a command to. For example, if you want to teach the MUTE button on the URC-A6 the TV Mute command from the other remote, first press the MUTE button on the URC-A6 and the TV component button LED light will blink once indicating that the URC-A6 is ready to learn the command.

STEP 4: Press and hold the MUTE button on the other remote until the component button LED on the URC-A6 blinks twice. Now you can continue learning all other buttons from your old remote by pressing the next button on the URC-A6 and repeating this step.

Note: The component LED will blink five times if there was an error in the learning process. In this case, please repeat Steps 3 and 4.

STEP 5: Once the URC-A6 has learned all the buttons in the selected component mode, press and hold the Component button and ENTER [ENT] buttons at the same time to save the learned functions. The component LED light will blink three times to confirm the programming. Now test all the buttons to make sure they learned correctly.

Repeat Steps 1-5 to program any other component modes.

If the Learning Method does not work, here are a few suggestions:

- If you have a Plasma TV, move to another room.
- Avoid programming under fluorescent light or direct sunlight.
- Put new batteries in the old remote.
- Gradually vary the distance between the two remote controls.
- Tap the button on your old remote instead of pressing and holding it during the learning process.

Here are some additional facts regarding the Learning process:

- Learned functions override any existing pre-programmed functions on the remote control.
- Learned functions are automatically erased when a new function is learned on the same button.
- Learned functions are retained even after a different set-up code number is programmed into the remote control.
- To return to an original preprogrammed function, a learned function must to be erased.

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

**PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER**

**IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com
or dial 1-800-901-0800
(9:00AM-6:00PM EST)**

Special Advanced Features

Programming Automated Activities

The URC-A6 has six Macro buttons (POWER, SYSTEM OFF, A, B, C, D) that are designed to store up to 20 commands in each button. Pressing any one of the Macro buttons, or Automated activity, will send out the series of commands that are stored in that particular button.

MacroPower™ Total System On/Off


MacroPower makes several devices work together by pressing one button. Imagine the convenience of turning on your TV, your DVD player and your Surround Sound receiver by pressing a single button on your URC-A6. What could normally take three remotes and three button pushes, the URC-A6 can accomplish with the press of one button. We call that MacroPower. Any of the Power On or the System Off buttons can be programmed for MacroPower control. To set it up, follow these easy steps:

STEP 1: To program MacroPower commands for the Power ON button, press the POWER button and the MUTE button at the same time for 2 seconds until one of the component button LED lights turns on.



IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the component button you want to turn on and then the POWER button; repeat for all other components in the order you want them to turn on. The component LED lights will blink once each time you press the POWER button.

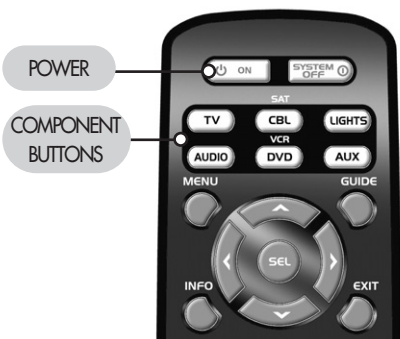

STEP 3: Once you've entered all the Power On commands, press the CHANNEL UP ▲ button to save your MacroPower commands. The component LED lights will blink three times to confirm that the programming has been successfully saved.



SUGGESTION: Most of the components have the same signal to turn the power On and Off. You may want to program MacroPower only in the POWER button and save the System Off button to turn components On or Off individually.

Note: If you want to program MacroPower for the SYSTEM OFF button, repeat the same steps used for Power ON programming.

Notes regarding programming multi-commands to Macro buttons:

- You can program up to 20 commands on each Macro button.
- You can program delays in between commands by pressing the PAUSE button. Each press adds a one-half second delay.
- Also, if you add the delay time as the first step of Macro commands, the remote will not send the Macro unless the button is held for two seconds. (This is the Press & Hold Function).
- You can also program macro commands in 'layers' by pressing the STOP button in between commands. (For example, if you press CBL, 009, STOP, 035, STOP, 365, STOP and the CH+ button in Step 2) the remote will send out 009 at the first press of the 'A' button, and then send out 035 at the second press, etc.
- You cannot program the CH+ or PAUSE buttons as macro commands.

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

**PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER**

**IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com**

**or dial 1-800-901-0800
(9:00AM-6:00PM EST)**

Programming “My Favorites” - Favorite Channel Buttons

In Cable mode, the A, B, C, D buttons are also designed to serve as dedicated Favorite Channel buttons. Each button will access one of your favorite channels with just one button press. Here’s how to program Favorite Channels:

STEP 1: Press the CBL button to select the Cable mode.

STEP 2: Press the ‘A’, ‘B’, ‘C’ or ‘D’ button and the MUTE button at the same time for 2 seconds until the CBL component LED turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.



STEP 3: Using the Number Pad, punch in the Channel number of the Favorite Channel that you want to store in the Macro button. The Cable component LED light will blink once for each button pressed.

STEP 4: Press the CHANNEL UP button to store the commands entered. The CBL component LED will blink three times to confirm the programming.



More Favorite Channels

You can also use the "A, B, C and D" buttons to program favorite channels. Each button can program up to 5 favorite channels (or a total of 20 button presses), but you're not limited to using these buttons for only that. You can record any series of button presses into a macro. This is great switching video or audio sources. Here is an example of how to program a macro on the "A" button with three favorite channels. We'll use "25, 50, and 75."

- STEP 1:** Press the device you are getting channel control from. Ex. Cable.
- STEP 2:** Press and hold the "A" button and "Mute" button at the same time until a device button lights up.
- STEP 3:** Press "2".
- STEP 4:** Press "5".
- STEP 5:** Press "Select".
- STEP 6:** Press "Stop".
- STEP 7:** Press "5".
- STEP 8:** Press "0".
- STEP 9:** Press "Select".
- STEP 10:** Press "Stop".
- STEP 11:** Press "7".
- STEP 12:** Press "5".
- STEP 13:** Press "Select".
- STEP 14:** Press "Stop".
- STEP 15:** Press "Channel Up" to save macro.

Note: Pressing the "Select" button just assures the quickest response from the Cable box. Pressing "Stop" allows you to program several favorite channels on one button. Now, the first press of the "A" button will change the channel to "25." The second, to "50" and the third, to "75." Then the sequence starts all over again.

SimpleSound™ Total System Volume Control


SimpleSound is one of the most exciting features of the URC-A6. It gives you total volume control over ALL the components in your system, even those that do not have built-in volume control, such as TIVO, DVD and VCR. SimpleSound saves you the hassle and inconvenience of constantly switching between component modes just to control volume.

First you should identify which device in your system will be used to deliver sound. In a basic system, the sound may come from your TV speaker. In a more advanced system, the sound may come from your audio components (such as a Surround Sound Receiver or Home Theatre system).

Now, let's set-up SimpleSound. Here's how:

STEP 1: Press and hold the button that corresponds to the Component you want to add volume control to (such as a DVD or DVR) and the SELECT (SEL) button at the same time for about three seconds until the component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

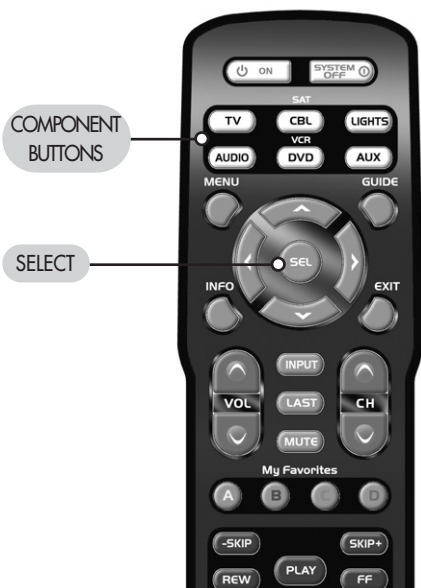

STEP 2: Press the VOLUME UP button and then press either the TV or AUDIO component button that you want to use for volume. The Component LED light will blink three times to confirm that it is saved. This sets up three buttons (Volume Up, Volume Down and MUTE) as a group for that component.



Repeat Steps 1-2 for all other components.

Note: SimpleSound is what's technically referred to as a "Punch Through" feature and is not limited to volume control. It can also be applied to other groups of buttons. If you find yourself switching to a particular component mode frequently to access a particular control, consider using "Punch Through".


Channel Control “Punch Through”

This “Punch Through” enables you to program the URC-A6 so that either the Cable or TV Channel Controls (CHANNEL UP, DOWN, LAST, CHANNEL NUMBERS 0-9, +10 and ENTER) will also operate in other component modes on the remote control.

STEP 1: Press and hold the component button you want to add channel control to, such as DVD or DVR, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the CHANNEL UP button. The component LED light will blink once.

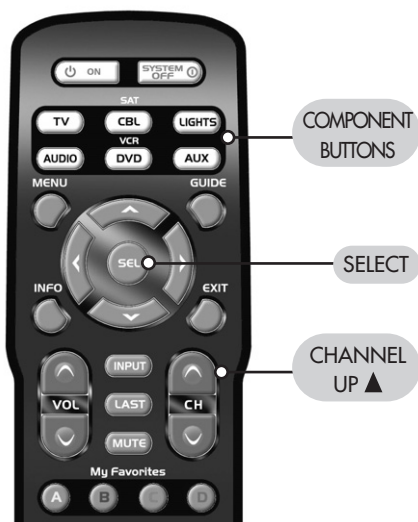

STEP 3: Press either the TV or CBL button that you want to use as the source of channel control. The component LED will blink three times to confirm it is saved.


Transport Control “Punch Through”

This “Punch Through” enables you to program the URC-A6 so that DVD or DVR Transport Controls (PLAY, STOP, FF, REW, PAUSE, SKIP and RECORD) will also operate in other component modes on the remote control.

STEP 1: Press and hold the component button you want to add Transport Control to, such as CBL or TV, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the PLAY button. The component LED light will blink once.

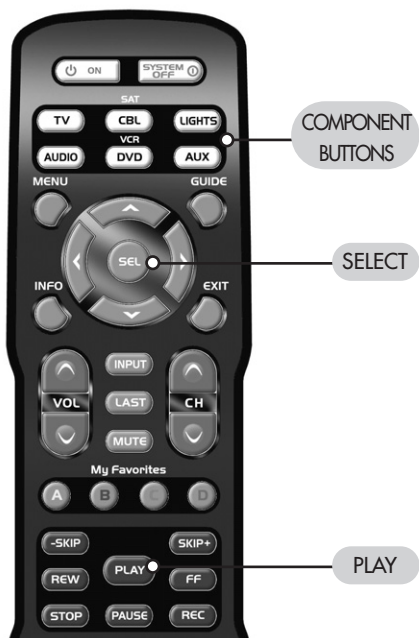

STEP 3: Press either the DVD or DVR button that you want to use as the source of Transport Control. The component LED will blink three times to confirm it is saved.


OSD (On-Screen Display) Control “Punch Through”

This “Punch Through” enables you to program the URC-A6 so that CBL or DVD OSD Controls (MENU, GUIDE, INFO, EXIT, SEL and 4 Cursor Controls) will also operate in other component modes on the remote control.

STEP 1: Press and hold the component button you want to add OSD Control to, such as TV or DVD, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the MENU button. The component LED will blink once.

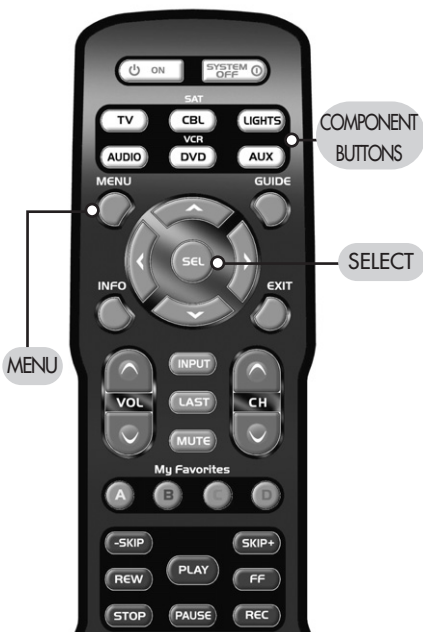

STEP 3: Press either the CBL or DVD button that you want to use as the source of OSD Control. The component LED will blink three times to confirm it is saved.

Input Switching Macros

These macros can be difficult and will vary depending on your specific setup. Because most TVs have a "Toggle" input feature, there's no way to jump to a specific video source discretely. "Toggle" means that you have one button on your remote that cycles through all available video sources (inputs) on your TV.

With a Toggle input feature, you will need to set a starting point (default input). Since you are most likely watching Cable TV most of the time, you might want to set that input at the starting point. So you'll be programming your macros assuming that you are always on the Cable input. Now, what you'll have to do is figure out how many presses of the input button it will take to get to the desired video source, then how many presses it will take to get back to the starting point. This way, you can use the "B" button to switch to the "DVD" input, then back to the "Cable input" and maybe the "C" button to switch to the "VCR" input, then back to the "Cable" input.

Below is an example of a macro on the "B" button that switches video sources on your TV to the "DVD" input. Let's say that it takes 2 presses of the input button to get to the "DVD" input (from the starting point) and 3 presses of the input button to get back to the "Cable" input.

STEP 1: Press and hold the "B" button and "Mute" button at the same time until a device button lights up.

STEP 2: Press "TV".

STEP 3: Press "Input".

STEP 4: Press "Pause".

STEP 5: Press "Input".

STEP 6: Press "Stop".

STEP 7: Press "TV".

STEP 8: Press "Input".

STEP 9: Press "Pause".

STEP 10: Press "Input".

STEP 11: Press "Pause".

STEP 12: Press "Input".

STEP 13: Press "Stop".

STEP 14: Press "Channel Up" to save macro.

Pressing "Pause" in between input commands will add a small delay after each press of the input button. This will assure that all commands get sent properly. Much like in the previous example, pressing the "Stop" button allows you to start a new macro. So, the first press of the "B" button will change inputs to the "DVD" video source and the second press will change back to the starting point. It is important to always switch back to the default starting point. This way it sets up the next macro on another "Favorites" button to execute properly.


Erasing Commands -- Overview

You can erase a single learned command, all learned commands in each component mode, SimpleSound programming, MacroPower commands, or re-set the remote to original factory default settings.

Erasing a Single Learned Command from One Component

STEP 1: Press the component button where the learned command is stored and the ENTER buttons at the same time for two seconds until the component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

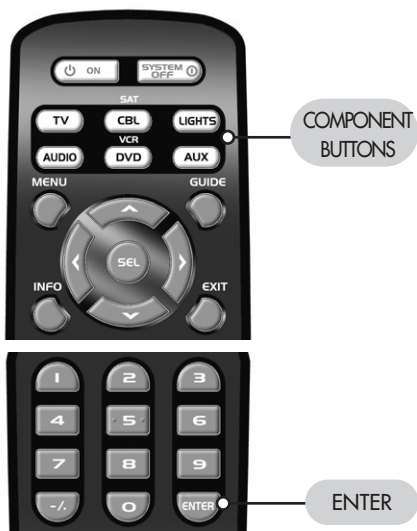

STEP 2: Press and hold the button you want to erase for two seconds. The component LED light will blink twice to confirm the erasure.

STEP 3: Repeat Step 2 to erase any other buttons in the selected component mode.

STEP 4: To exit Erase mode, press and hold both the component button and the ENTER (ENT) button at the same time until the component LED light blinks three times.


Erasing All Learned Commands from One Component

This function allows you to erase all the learned commands from one component. For example, if you want to erase all learned commands on the TV component button because you bought a new TV, the process is very simple.

STEP 1: Press the component button where all the learned commands are stored and the ENTER button at the same time for 2 seconds until the component LED turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press and hold both the component button you want to erase and the PAUSE button at the same time for two seconds, until the component LED light blinks twice to confirm the erasure.

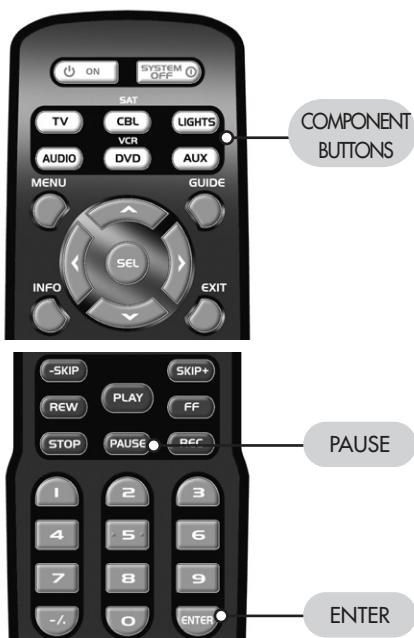


STEP 3: To exit Erase mode, press and hold both the component button and the ENTER (ENT) button at the same time until the component LED light blinks three times.

Erasing MacroPower & Other Macro Commands

STEP 1: To erase MacroPower commands on the POWER ON or SYSTEM OFF button, press and hold either the POWER ON or SYSTEM OFF button and the MUTE button simultaneously for two seconds until the current status component LED turns on.

IMPORTANT: If you don't proceed to the next step within 30 seconds, the LED will turn off and exit set-up mode and you will need to start over.

STEP 2: Press the CHANNEL UP button to erase and exit Erase mode. The component LED light will blink three times to confirm the erasure.

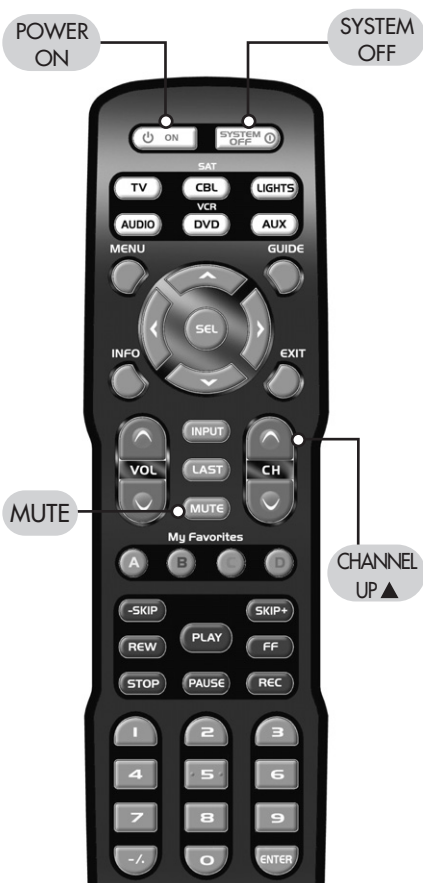


NOTE: To erase other Macros, simply press the appropriate button in Step 1 in combination with the MUTE button.

Erasing SimpleSound & Other “Punch Through” Commands

STEP 1: Press and hold the Component button you want to erase volume control from, such as DVD or VCR and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

STEP 2: Press the VOLUME UP button and the same component button from Step 1. The component LED light will blink three times to confirm the erasure.

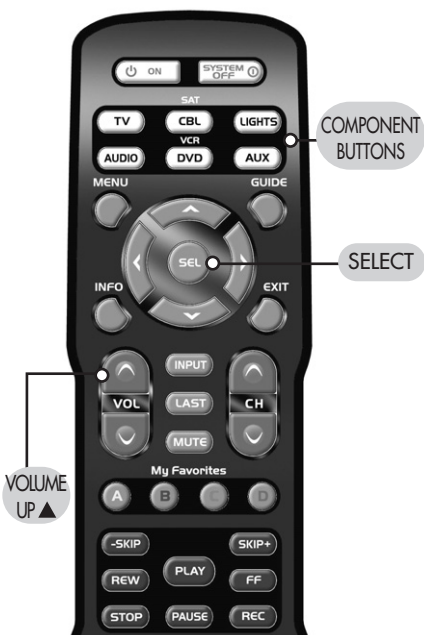

Repeat Steps 1–2 to erase SimpleSound commands from other components.

NOTE: To erase other “Punch Through” commands, simply press the following buttons in place of VOLUME UP in Step 2:

- For Channel Control, press: CHANNEL UP
- For Transport Control, press: PLAY
- For OSD Control, press: MENU

Factory Reset

You can reset your URC-A6 remote to the original factory default settings.

Press and hold both the TV and RECORD buttons for about five seconds until the LIGHTS component LED light blinks five times. All programming and set-up codes that you have entered into the remote will be erased and the URC-A6 will return to the original factory default settings.

Warning

This procedure will erase all programming and set-up codes that you have entered into the remote.




Finding a Component's Set-up Code Number

If you used the Auto-Search or Learning Methods to program a component, you may not know the code number you programmed. Here is a way for you to identify what that code number is, so you can make a note in the back of this Manual for future reference.

STEP 1: Press the component button you would like to verify and the SELECT [SEL] button at the same time for 2 seconds until the selected component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

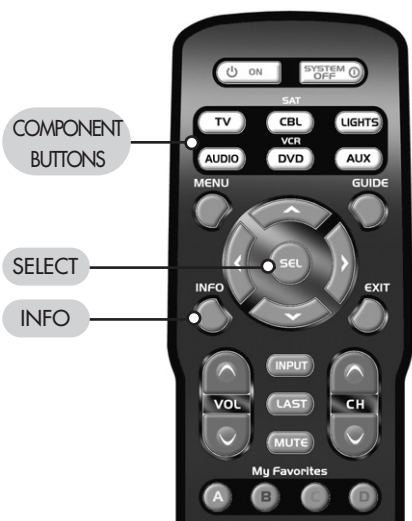

STEP 2: Press the INFO button and count the number of times the Component LED light blinks. This number indicates the first digit of the code. Next it will pause for about one second and begin blinking again to indicate the number of the second digit. Then once again it will pause, then blink, to indicate the number of the third digit.

Example: One blink, pause, eight blinks, pause, three blinks indicates code number 183.

Note that ten (10) blinks represent the number 0.

Pre-Programmed Code Tables

The URC-A6 Pre-Programmed code library is classified by category (CABLE/SAT, TV, DVD, etc).

Within each category, the code numbers are listed in rows by brand (Sony, Panasonic, B & K, etc.).

Some brands have more than one three-digit code.

Circle the correct row and refer to it while you perform setup operations.

CABLE/SAT	Cable Set top boxes and satellite receivers	32
TV	TVs, Plasmas, Projectors and Monitors	33-34
DVD/DVR/VCR	DVD Players and Recorders VCRs, DVRs & Combo Units	35
AUDIO	Amps, Preamps and A/V Receivers	36
AUX	iPod, Media PC, Gaming System	37
LIGHTS	Lighting Controls	38

CABLE/SAT

Brand	Code Numbers
CABLE Boxes	
ABC	004 042
ADELPHIA	001 110
ADVANCED NEWHOUSE	001
ALTIRIO	001
AMERICAST	099
ARMSTONG	110
AT&T BROADBAND	110
AT&T IPTV	251
ATLANTIC BROADBAND	001 110
BELL SOUTH	099
BLUE RIDGE	001 110
BRESNAN	110
BRIGHT HOUSE	001 110
BUCKEYE COMM	110
CABLEVISION	001 110 108
CHARTER	001 110
CISCO	001 042 251
COGECO	110
COMCAST	001 110
COMSAT	110
COX DIGITAL	001 110
ENVIO	005
DIGEO	111
DIRECTOR	110
GCI	110
GENERAL INSTRUMENT	110 004
GNC	099
INSIGHT	110
JERROLD	110 004
MASSILLON	110
MEDIACOM	110
MIDCONTINENT	110
MOTOROLA	110 148 111 253
MOXI	111 086
NCTC	110
NEW WAVE	110
OAK	031
ONELINK	001
PACE	001 110
PANASONIC	044 047
PHILIPS	085
PIONEER	001 034 105
RCA	047
RCN	110
RODGERS	001
SCIENTIFIC ATLANTA	001 042 251
SEREN	001
SERVICE ELECTRIC	110
SHAW	110
SIGECOM	001
SONY	108
SPRUCER	047
STARCOM	004
SUSQUEHANNA	001 110
TIME WARNER	001 110
TORX	004
UNITED CABLE	004
VERIZON	110
VIDEOTRON	001
VISTA III MEDIA	110
WAVE BROADBAND	110
WEHCO VIDEO	110
WEGENER	250
WIDE OPEN WEST	001 099

Brand	Code Numbers
SATELLITE Receivers	
CABLEVISION	148
DIRECTV	173
DISH	122
ECHOSTAR	122
EXPRESSVU	122
GE	116
GENERAL INSTRUMENT	148
GOI	122
HITACHI	114
HTS	122
HUGHES	114
JVC	122
LG	170
MITSUBISHI	114
NEXT LEVEL	148
PANASONIC	142
PHILIPS	156 114
PROSCAN	116
RADIOSHACK	148
RCA	116
SAMSUNG	163 175
SONY	115
STAR CHOICE	148
TOSHIBA	114
VOOM	148

TV

Brand	Code Numbers
ABEX	025
ADMIRAL	072 251 333
ADVENT	247
ADVENTURA	002
AIKO	103
ALERON	028
AKAI	116 146 248 281 404 405
A MARK	112
AMERICA ACTION	043
AMPRO	073
AMSTRAD	052
ANAM	043 054 056 080 112
AOC	116 363 112 058
APEX DIGITAL	006 591
ASTAR	477
AUDIOVOX	076
BELCOR	116
BELL&HOWELL	333 072
BRADFORD	043
BROCKWOOD	116
CANDLE	116 002 003 363
CAPEHART	058
CELEBRITY	001
CENTURION	116
CETRONIC	043
CITIZEN	116 002 003 363 043 258 103
CLARION	043
CLASSIC	043
CLP CLASSIC	333
COLORTYME	116
CONCIERGE	073
CONCERTO	363
CONTEC	043 050 051
CORNEA	116
CRAIG	043 054
CROSLEY	164
CROWN	043
CURTIS MATHES	116 258 363
CXC	043
DAEWOO	363 043 076 103
DAYTRON	363
DELL	320 164 363
DIGITAL LIFESTYLE	528
DIGITAL PROJECTION	570
DIGITRON	258
DIMENSIA	333
DUKANE	011 025
DUMONT	116 073
DURABRAND	096
DWIN	257
DYNASTY	043
DYNEX	399
EIKI	187
ELECTROBAND	001
ELECTROHOME	024 076
ELECTROGRAPH	466
ELEKTRA	072
ELEMENT	494
EMERSON	028 048 043 155 005 116 363 047 050 051 076 096 153
ENVISION	116

Brand	Code Numbers
ESA	387
FISHER	007 057
FUJITSU	246 198
FUNAI	028 043 052
FUTURETECH	043
GATEWAY	242 268
GE	073 116 008 009 034 056 074 155 333 363
GEM	391
GIBRALTER	116 073
GOLDSTAR	113 116 102 004 106 112
GRUNPY	028 043
HAIER	363
HALL MARK	363
HANNSPREE	381
HARLEY DAVIDSON	028
HARSPER	466
HARVARD	043
HAVERMY	081
HELLO KITTY	076
HIMITSU	043
HISENSE	419
HITACHI	011 166 363 009 010 012 023 158 072
HP	378 316 327
ILO	472 399
INFINITY	164
INFOCUS	333 330
INTEQ	073
INSIGNIA	350 399 400 052 164 403
JANEIL	002
JBL	164
JCB	001
JCPENNEY	363 024 116 008 009 030 065 258 333
JENSEN	013
JVC	038 034 001 083 199 210
KAWASHO	116 001
KEC	043
KENWOOD	116 001
KLEGG	466
KLOSS	002 059
KREISEN	530
KTV	043 116
KURAZAI	072
LG	363 113 116 102 363 106 112
LODGENET	072
LOEWE	164
LOGIK	072
LUXMAN	363
LXI	166 007 138 052 251 333 164
MAGNAVOX	164 059 116 003 060 061 363 022 333 094 226 390
MAJESTIC	333 072
MARANTZ	116 164
MATSUI	164
MATSUSHITA	080
MAXENT	242
MEGATRON	116 011

TV

Brand	Code Numbers
MEMOREX	007 072 363
MGA	116 363 024 028
MIDLAND	333 073
MINTEK	282 362
MINUTZ	008
MITSUBISHI	124 109 024 363 028 040 146
MONTGOMERY WARD	333 072
MOTOROLA	081
MTC	116 363 258
MULTITECH	043
NAD	138 025
NEC	272 132 134 116 040 024 056 019 262
NET TV	242
NIKEI	043
NIKKO	116
NIKO	527
NORCENT	390
NTC	103
NUVISION	351
OLEVIA	432
ONKING	043
ONWA	043
OPTIMUS	025
OPTONICA	019 251
OPTOMA	265
ORION	096
PANASONIC	080 034 056 164 208 583
REVOLUTION HD	466
PHILCO	116 003 059 060 164 363 024 056
PHILIPS	164 005 093 038 116 003 363 059 206 431 594
PILOT	116
PIONEER	234 025 018 023 116 272 393
POLAROID	388
PORTLAND	363
PRIMA	164
PRISM	034
PROSCAN	333
PROTON	363 112 058 171 172
PROTRON	392 398
PROVIEW	494
PROX	572
PULSAR	116 073
QUASAR	034 056
RADIO SHACK	019 363 043
RCA	333 065 116 363 024 056 152 023 074
REALISTIC	007 019 043 047
RUNCO	072 182 073 395 416
SAMPO	116 058 363 242
SAMSUNG	258 050 089 105 363 333 228 229
SAMSUX	116
SANSEI	076
SANSUI	096
SANYO	166 007 020 053 057 082 187
SCEPTRE	276
SCOTCH	116
SCOTT	028 043 363 048

Brand	Code Numbers
SEARS	138 030 363 007 028 057 094 333 082 166
SELECO	205 011
SHARP	251 019 014 028 029 363 022 175
SHENG CHIA	081
SHOGUN	116
SIGNATURE	072
SIMPSON	003
SONY	001
SOUNDESIGN	028 363 003 043
SOVA	363
SOYO	528
SPECTRICON	112
SPECTRONIQ	392 398
SQUAREVIEW	052
STARLITE	043
SSS	363 043
SUPRA	116
SUPRE MACY	002
SUPREME	001
SVA	328
SYLVANIA	116 003 052 059 060 164 333 593
SYNTAX OLEVIA	333 363 432
TANDY	251
TATUNG	056
TECHNICS	034 080
TECHNOL ACE	028
TECHWOOD	363
TEKNIKA	002 003 363 024 028 043 072 258
TELERENT	072
TERA	172
TMK	363
TNCI	073
TOSHIBA	138 030 007 040 258 325
TRUTECH	529
TVS	096
UNIVERSAL	008 009
VICTOR	038
VIDEO CONCEPTS	146
VIDIKRON	174 164 188
VIDTECH	363
VIEWSONIC	242 389
VIKING	002
VIORE	472 592
VISCO	494
VITO	363
VIZIO	386 387
WARDS	363 008 009 019 028 060 061 072 074 164 034
WAYCON	015
WESTINGHOUSE	076 276
YAMAHA	116 363
YORK	363
YUPITERU	043
ZENITH	363 073 072 095 103
ZONDA	112

DVD/DVR/VCR

Brand	Code Numbers
AKAI	281
ALLEGRO	091
APEX DIGITAL	111 115
BLAUPUNKT	111
BROKSONIC	130
CINEVISION	091
COBY	260
CYBERHOME	271
DENON	138 173
DURABRAND	091
DVD 2000	017
EMERSON	091 143
ENTERPRISE	074
FISHER	147
FUNAI	143
GOLDSTAR	091
GO VIDEO	137 091 220 221 222
GREENHILL	111
HARMAN KARDON	084 140
HITACHI	101
HITEKER	087
ILO	268
INITIAL	111
INSIGNIA	143
JBL	084
JVC	012
KENWOOD	151
KISS	279
KLH	135
KRELL	104
LITEON	264 265
LEXICON	148
LG	091 057
MAGNAVOX	001 096 143 282
MARANTZ	001 095
MALATA	267
MERIDIAN	153
MINTEK	111 282
MITSUBISHI	017
MYRYAD	102 134
NAD	088
NAKAMICHI	103
NESA	111
ONKYO	076 035 180 338
OPTIMUS	023
OPPO	266 341
ORION	130
PANASONIC	138 144 150 285
PHILIPS	001 095 344
PHILIPS MAGNAVOX	035 001
PIONEER	023 131
POLAROID	233
POLK AUDIO	035 001
RIO	091
RJTECH	269
SAMSUNG	165 170 137 159 275
SANSUI	154
SANYO	147
SEARS	130
SENSORY SCIENCE	222
SHARP	094
SHINSONIC	033
SONIC BLUE	091
SONY	002 033 145 191 286 343

Brand	Code Numbers
SYLVANIA	143
SYMPHONIC	143
TATUNG	102
TEAC	023 270
TECHNICS	138
TECHWOOD	088
THETA DIGITAL	023
TOSHIBA	035 130 141 164 188 273
URBAN CONCEPTS	035
VENTURER	149
YAMAHA	138 089 001 197
ZENITH	057 091

DVD Recorders

GO VIDEO	220 221 222
CYBERHOME	271
ILO	268
KISS	279
LITEON	265
PANASONIC	138
SENSORY SCIENCE	222
SONY	191
TOSHIBA	188

TV/DVD Combos

AKAI	281
FUNAI	143
INSIGNIA	143
MAGNAVOX	282
MINTEK	282
SAMSUNG	165
SYLVANIA	143
SYMPHONIC	143
TOSHIBA	130

TV/DVD/VCR Combos

MAGNAVOX	143
PANASONIC	144
SYLVANIA	143
TOSHIBA	164

DVD/VCR Combos

GO VIDEO	137
PANASONIC	150
PHILIPS	001
(VCR Functions for VCR 067)	
SAMSUNG	137 159
SANSUI	154
SONY	145
TOSHIBA	141
ZENITH	091
(VCR Functions for VCR101)	

AUDIO

Brand	Code Numbers
ADCOM	082 092 225 161 269 356
AIWA	170 018 104 202 203 213 211 188
AKAI	189
ANTHEM	335 337
ARCAM	141 077
ATLANTIC TECHNOLOGY	342
B & K	096 097
BOSE	070 170 224 347 409 460
BOSTON ACOUSTICS	447
CARVER	006 028 201 214 226 185 013 077 284
CITATION	148
CLARION	026
DENON	001 109 215 230 234 330
ELAN	290
ENLIGHTENED AUDIO	099 098
ESCIENT	451
FISHER	214 066
FLEXTRONICS	378
FOSGATE AUDIONICS	148 342
HARMAN KARDON	148 233 077 154 118 318
HITACHI	020
INSIGNIA	589
INTEGRA	275 017 046 108 080 209
JAMO	398
JCPENNEY	216
JVC	163 191 114 279 291
KENWOOD	026 066 145 192 005 280 374
KLH	331
KOSS	216 573
KRELL	384
LEXICON	120 235 236 237 357 360
LINN	124 377
LUXMAN	009 139 165 115 004
MAGNAVOX	086 164 152 208
MARANTZ	006 028 031 040 063 185 186 265 289 492
MCINTOSH	238 286
MERIDIAN	100 012 013
MITSUBISHI	242 204
MONDIAL	157 158 042 043 081 112
MYRYAD	077
NAD	186 113
NAKAMICHI	040 244 245 172 183 287
NEC	176
NIRO	343
NILES	403
ONKYO	275 017 046 108 080 209
OPTIMUS	026 041
OUTLAW	342
PANASONIC	032 195 219 177 292
PARASOUND	129 130 132 261 294 295 333 334

Brand	Code Numbers
PHILIPS	249 250 063 805
PIONEER	014 039 044 069 168 116 035 078 198 480
PROCEED	144 268
RCA	010 048 117 156 067 288
REALISTIC	019 095
ROTEL	083 085
SAMSUNG	016 804
SANSUI	040 048 110 063 065 228
SANYO	214
SCOTT	019
SHARP	026 094 175
SHERWOOD	024 102 106 447
SONY	002 018 247 248 166 101 184 218 271
SOUNDESIGN	036
SUNFIRE	344 345 066
TEAC	005 019 049 040 212 217
TECHNICS	122 176 193 219 178 177 200 257 262
THETA DIGITAL	136
TOSHIBA	060 087 198 278
YAMAHA	026 253 169 067 173 205 264 232 089 274
ZENITH	143 210

SATELLITE Radios

DELPHI	515
POLKAUDIO	515
SIRIUS	555
XM SATELLITE RADIO	515

AUX

Brand Code Numbers

iPod Controls

APPLE / iPod	901 912
BOSE	909
GRIFFIN	471
KENSINGTON	906
TEN TECHNOLOGY	901

MEDIA PC Controls

DELL	001
GATEWAY	001
HP	001
KEYSPAN	797
SONY	001
TOSHIBA	001
WINBOOK	001

GAMING SYSTEM Controls

MICROSOFT / XBOX	908 607
SONY / PS2	914

URC-URC-A6 AUX (D2A)

ARTEC	586
CASTI	587
CRAIG	588
GRIDLINK	592
INET ACCESS	589
INSIGNIA	567
LASONIC	592
MAGNAVOX	584
RCA	585
SANSONIC	592
TVAX	589 590
ZENITH	567
ZINWELL	591 593

LIGHTS

Brand	Code Numbers
COLORADO VNET	311 312 313 314 315 316 317 318
CYRON	421
LEVITON	321
LIGHTOLIER CONTROLS	307
LITE-TOUCH	708 757
LUTRON	001 158 159 306 308 309 340 341
RAKO	301 302 303 304 305
WATT STOPPER	319 320
XANTECH	688 689
X-10	183 257

Frequently Asked Questions

If the batteries run out, will I lose my settings?

No. The URC-A6 stores all of your settings in non-volatile FLASH memory. You could remove the batteries for months, replace them at your convenience, and the URC-A6 would still remember your settings.

What is MacroPower?

MacroPower is a very useful way to make a lot of things happen with one button push. For example, in most home theaters, to watch television, the user must turn on the TV, then turn on the Cable Box or the Satellite Receiver, then turn on the Surround Sound system for sound. Instead of pressing all of those buttons one at a time, MacroPower enables you to turn on all of these components, in the sequence you want, with one button push. For more information on why and how you should program MacroPower commands, refer to page 17 in this Manual.

What if my remote control no longer works from a distance?

Replace the batteries with new Alkaline batteries.

Who can I contact for more answers?

The Universal Remote Control technical support and customer service staff are ready to answer any questions you might have.

E-Mail us at techsupport@universalremote.com

Visit our website www.universalremote.com

Call us at 1-800-901-0800

Monday - Friday, 9AM to 6PM (EST)

Limited Warranty

UNIVERSAL REMOTE CONTROL, INC. warrants this product against defects in material or workmanship for a period of one (1) year and as set forth below. Universal Remote Control will, at its sole option, repair the product using new or comparable rebuilt parts, or exchange the product for a comparable new or rebuilt product.

This warranty does not apply to the following:

- Units purchased from unauthorized resellers.
- Units purchased second-hand (used).
- Units installed or deployed for rental or commercial use.
- Damage caused by misuse, neglect, or acts of nature.
- Products that have been modified or incorporated into other products.
- Products purchased more than 12 months ago.

Specifications

Learning Capability

IR frequencies (15kHz to 100kHz)

Macro Capability

6 Macros of up to 20 steps each

IR Range (Line of Sight via Infrared) 30-50 feet, depending on the environment

Weight

6.9 oz. (with batteries)

Size

2 1/8" x 1 1/8" x 8 3/4"

Batteries

Two AAA Alkaline batteries included

Information To The User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note : The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Notes

Notes

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

**PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER**

**IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com
or dial 1-800-901-0800
(9:00AM-6:00PM EST)**



UNIVERSAL[®]
remote control

The Pioneer in Control Technology

500 Mamaroneck Avenue, Harrison, NY 10528
Phone: (914) 835-4484 Fax: (914) 835-4532