

**Alternative Adjustment Guide For Some Remote Controls
Issued by Large Cable and Satellite Providers.**

DirecTV, Dish, Comcast, Verizon FIOS and AT&T remotes are described.
If you have one the remote controls described in this sheet,
the directions provided overcome the following issues:

- 1) Your TV remote does not work properly after using the ZVOX Audio "Teach Your ZVOX to Learn the Remote" feature.
- 2) Your TV does not allow you to turn off its internal speakers.

(866) 367-9869 | info@zvoxaudio.com

A ZVOX Audio system “learn your remote” feature does not work with DirecTV remotes in our standard manner. The following instructions should be used to configure a DirecTV remote.

DirecTV remote RC65 and many other DirecTV remotes:

Configure the ZVOX Audio speaker:

On the front panel of the ZVOX Audio speaker:

- Press and hold down both the Mute/Power button and the Volume Up button until you see “PS” on the display.
- Release the buttons.
- Press and release the Volume Up button until you see “PS-5” (“PS-3” for Panasonic TV)
- Wait until the “PS-5” or “PS-3” display disappears.

Then, configure the DirecTV remote:

- Move the slider button at the top of the DirecTV remote over to the AV1 position.
- Press and hold the MUTE and SELECT buttons until the light above AV1 blinks twice.
- Enter 11480 (10812 for Panasonic TV). The AV1 light will blink twice.
- Press and hold the MUTE and SELECT buttons until the light above AV1 blinks twice.
- Enter 993 and then press SELECT.
- Move the slider button to the left, back to the DirecTV icon.

The DirecTV remote now powers your TV on/off, while the volume control will control your ZVOX.



DirecTV remotes RC23, RC32:

Configure the ZVOX Audio speaker:

On the front panel of the ZVOX Audio speaker:

- Press and hold down both the Mute/Power button and the Volume Up button until you see “PS” on the display.
- Release the buttons.
- Press and release the Volume Up button until you see “PS-5” (“PS-3” for Panasonic TV)
- Wait until the “PS-5” or “PS-3” display disappears.

Then, configure the DirecTV remote:

- Move the slider button at the top of the DirecTV remote over to the AV1 position.
- Press and hold the MUTE and SELECT buttons until the light above AV1 blinks twice.
- Enter 10250 (10812 for Panasonic TV). The AV1 light will blink twice.
- Press and hold the MUTE and SELECT buttons until the light above AV1 blinks twice.
- Enter 993 and then press SELECT.
- Move the slider button to the left, back to the DirecTV icon.

The DirecTV remote now powers your TV on/off, while the volume control will control your ZVOX.



Dish Network Remote 20.1 IR or 21.0 IR:

These instructions describe how to configure your Dish Network remote to control the volume from your ZVOX Audio system and not from your TV.

The following instructions apply to any TV brand except Panasonic. If you have a Panasonic TV, use the alternate instructions below.

FOR ANY TV BRAND EXCEPT PANASONIC:

Part 1: Configure the ZVOX system

1. Power on your ZVOX system.
2. On the ZVOX system front panel, press and hold down both MUTE and VOLUME UP until PS-0 appears on the display (about 5-6 seconds). Release the buttons. The PS-0 display will continue flashing for about 5 seconds.
3. While PS-0 is flashing, repeatedly press VOLUME UP until it reads "PS-5". Wait for the display to stop flashing.

Part 2: Configure your Dish Network remote

Program code to the AUX button

1. On the Dish Network remote control, press and hold the AUX button until all the other mode buttons light up, and then release the AUX button. The AUX button flashes.
 2. Enter 0-5-1-2 then press the pound key (#).
- The AUX key will blink three times.

Lock the volume buttons to the ZVOX

1. Press and hold the AUX mode button until all mode buttons are lit, then release it. The AUX mode button will blink.
- 2 Press the POUND (#) button, press the plus (+) side of the VOLUME button, press the 0 number button, press the POUND (#) button. The AUX mode button flashes three times.
3. Press the SAT mode button then Press the plus (+) and minus (-) sides of the VOLUME button down simultaneously and release them.

You have just completed the programming. Now, when you press VOLUME +, VOLUME -, or MUTE, the volume of the ZVOX system is controlled regardless of whether the Dish Network remote is in the SAT mode or TV mode.



20.1 IR above, 21.0 IR below



Comcast Custom DVR 3-Device Universal Remote Control

These instructions describe how to configure your Comcast cable remote to control the volume from your ZVOX Audio system and not from your TV.

The following instructions apply to any TV brand except Panasonic. If you have a Panasonic TV, use the alternate instructions below.

FOR ANY TV BRAND EXCEPT PANASONIC:

Part 1: Configure the ZVOX system

1. Power on your ZVOX system.
2. On the ZVOX system front panel, press and hold down both MUTE and VOLUME UP until PS-0 appears on the display (about 5-6 seconds). Release the buttons. The PS-0 display will continue flashing for about 5 seconds.
3. While PS-0 is flashing, repeatedly press VOLUME UP until it reads "PS-5". Wait for the display to stop flashing.

Part 2: Configure your Comcast remote

Activate the AUX function

1. On the Comcast remote control, press AUX once. Then press and hold SETUP until the AUX key blinks twice, then release Setup.
2. Enter 1-0-0-4-7. The AUX key will blink twice.

Assign ZVOX code to the Aux button

1. Press AUX once, then press and hold Setup until the AUX key blinks twice, then release Setup.
2. Enter 1-0-2-5-0. The AUX key will blink twice.

Lock the volume buttons to the ZVOX

1. Press AUX once. Then, press and hold Setup until the AUX key blinks twice, then release Setup.
2. Enter 9 - 9 - 3 (the AUX key blinks twice) and then press AUX once. The AUX key will blink twice.
3. Press the CABLE button once.

You have just completed the programming. Now, when you press VOL+, VOL-, or Mute, the volume of the ZVOX system is controlled regardless of whether the Comcast remote is in the TV mode or Cable mode.



Comcast DVR 3-Device Universal Remote Control

These instructions describe how to configure your Comcast cable remote to control the volume from your ZVOX Audio system and not from your TV.

The following instructions apply to any TV brand except Panasonic. If you have a Panasonic TV, use the alternate instructions below.

FOR ANY TV BRAND EXCEPT PANASONIC:

Part 1: Configure the ZVOX system

1. Power on your ZVOX system.
2. On the ZVOX system front panel, press and hold down both MUTE and VOLUME UP until PS-0 appears on the display (about 5-6 seconds). Release the buttons. The PS-0 display will continue flashing for about 5 seconds.
3. While PS-0 is flashing, repeatedly press VOLUME UP until it reads "PS-5". Wait for the display to stop flashing.

Part 2: Configure your Comcast remote

Activate the AUX function

1. On the Comcast remote control, press AUX once. Then press and hold SETUP until the AUX key blinks twice, then release Setup.
2. Enter 1-0-0-4-7. The AUX key will blink twice.

Assign ZVOX code to the Aux button

1. Press AUX once, then press and hold Setup until the AUX key blinks twice, then release Setup.
2. Enter 1-0-2-5-0. The AUX key will blink twice.

Lock the volume buttons to the ZVOX

1. Press AUX once. Then, press and hold Setup until the AUX key blinks twice, then release Setup.
2. Enter 9 - 9 - 3 (the AUX key blinks twice) and then press AUX once. The AUX key will blink twice.
3. Press the CABLE button once.

You have just completed the programming. Now, when you press VOL+, VOL-, or Mute, the volume of the ZVOX system is controlled regardless of whether the Comcast remote is in the TV mode or Cable mode.



Instructions for programming your 4-device FIOS remote to work with a ZVOX SoundBase system (RC1445302)

Please note: This page describes the FIOS 4-device remote (with DVD, AUX, TV and STB buttons at the top). The newer, two-device FIOS remote (STB and TV only) cannot be configured to control a separate audio system. If you have a ZVOX Audio system and the 2-device FIOS remote, ZVOX Audio encourages you to replace the 2-device remote with a 4-device FIOS remote. As of July 2013, there are a number of sources for this remote control (search for *FIOS 4-device remote* on the internet). This remote is typically under \$20.

These instructions describe how to configure your Verizon FIOS remote to control the volume from your ZVOX Audio system.

The main text instructions are for any TV brand, except Panasonic.

The alternate instructions for Panasonic TVs are in *[brackets]*.

Part 1: Configure the ZVOX system

1. Power on your ZVOX system.
2. On the ZVOX system front panel, press and hold down both MUTE and VOLUME UP until PS-0 appears on the display (about 5-6 seconds). Release the buttons.

The PS-0 display will continue flashing for about 5 seconds.

3. While PS-0 is flashing, repeatedly press VOLUME UP until it reads "PS-5" [*"PS-1" for Panasonic TVs*].

Wait for the display to stop flashing.

Part 2: Configure your FIOS remote

Assign ZVOX code to the Aux button

1. Press and hold the AUX key.
2. While holding down the AUX key, press the OK key.
3. Release both keys simultaneously.

The Device Keys will blink twice.

5. Enter 3 - 7 - 3 - 6

[*1-7-8-5 for Panasonic TVs*].

The AUX key will blink 3 times.

Lock the volume buttons to the ZVOX

1. Press and hold the STB key.
2. While holding down the STB key, press OK.
3. Release both keys simultaneously.

The Device Keys will blink twice.

4. Press 9 - 5 - 5. The STB key will blink twice.

5. Press AUX. The AUX key will blink 3 times to indicate success in programming.

6. Press the STB key once.

Note: To return to controlling the volume via the TV, press TV in step 5.



AT&T U-verse S10-S2 Remote Control:

These instructions describe how to configure your AT&T U-verse remote to control the volume from your ZVOX Audio system and not from your TV. These instructions apply to ZBase 580, ZBase 555 and ZVOX V-Series systems. The following instructions apply to any TV.

Part 1: Configure your AT&T remote

Assign code to the AUX button

1. On the AT&T remote control, press AUX once.
2. Press and hold AUX, then press and hold the OK key then release both keys simultaneously. All the mode keys should flash twice.
3. Enter 6-0-1-0. -The AUX key will light up for 2 seconds.

Lock the volume buttons to the ZVOX

1. Press and hold AT&T key, then press and hold the OK key then release both keys simultaneously. All the mode keys should flash twice.
2. Enter 9-5-5.
The AT&T key will flash twice.
3. Press AUX.
The AUX key will light up for 2 seconds.

Part 2: Configure your ZVOX system

Locate the instruction sheet entitled "Your Current TV Remote Can Control Your ZVOX System"

1. Follow the instructions on that page for putting the ZVOX system into its learning mode.
2. Using the AT&T remote, program the *volume up*, *volume down*, *mute* and *power* keys as shown on the page.

You have just completed the programming.

The volume of the ZVOX system is now controlled by the AT&T remote no matter which control mode (AT&T, TV or DVD) is set on the AT&T remote.



AT&T Silver Remotes

Please refer to the image of the black AT&T remote on the previous page for button locations, if necessary.

How to configure your AT&T U-Verse SILVER remote to control the volume output of a recent ZVOX Audio system (V220, V320, V420, 555 and 580)

Overview:

You set the AUX device of the U-Verse remote control to a brand the ZVOX can learn.

You teach the ZVOX system to respond to the Volume, Mute (and Power, if desired).

You adjust the U-Verse remote so that the volume buttons always control the ZVOX, no matter what device is selected on the U-Verse remote.

ON YOUR REMOTE:

1) Press and hold the AUX button of the remote. While still holding down the AUX button, press and hold the OK button.

2) Let go of both buttons at the same time. You should see the four top buttons blink twice.

3) Type "6002" into the key pad. AUX button should blink three times.

You have now programmed your remote's AUX device setting to send out infrared commands the ZVOX system can learn.

IN FRONT OF YOUR ZVOX SYSTEM:

1) Press the AUX button on the U-Verse remote.

2) Follow the instructions provided with the ZVOX system to teach it to respond to the Volume Up, Volume Down, Mute and Power buttons.

3) Verify that the remote volume buttons

LOCK THE VOLUME BUTTONS OF THE U-VERSE REMOTE TO AUX

The following instruction were copied and pasted directly from the Remote's manual:

Volume Always Controls the same Device

1. Press and hold the AT&T/STB key on the remote control

2. While holding the AT&T/STB mode key, press the OK key

3. Release both the AT&T/STB key and the OK key

– All the mode keys will flash twice indicating programming mode

4. Enter 955 by pressing the number keys on the remote control

– The AT&T key will flash twice indicating correct entry

5. Press the mode key that you want to always receive the volume commands (AUX)

– The selected mode key will flash three times indicating successful assignment and return to normal operations

The volume commands will now go to the selected device no matter what mode you are in.