



LX-300+II Start Here




Unpacking

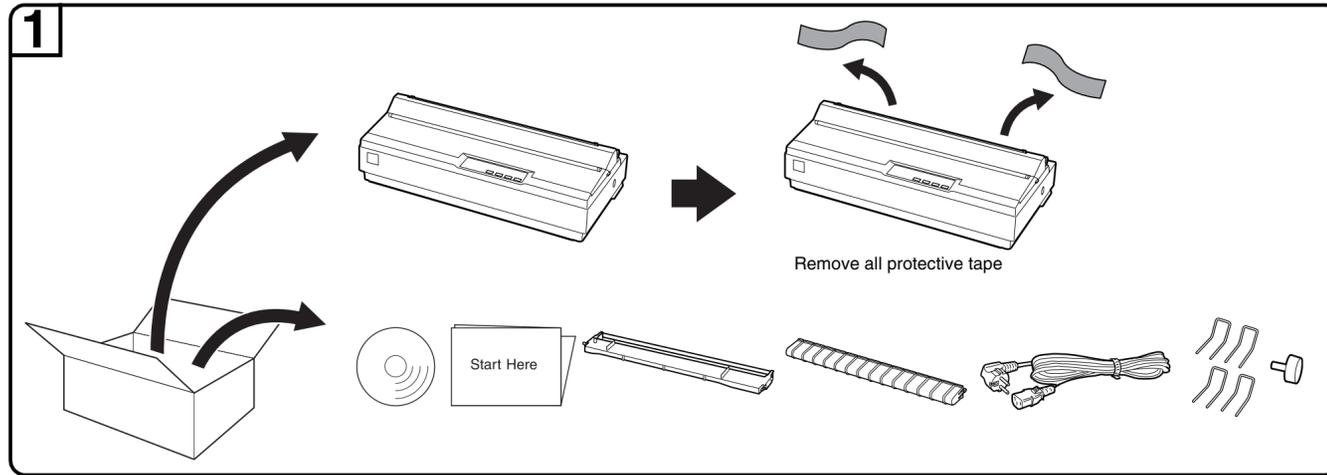


Assembling the Printer

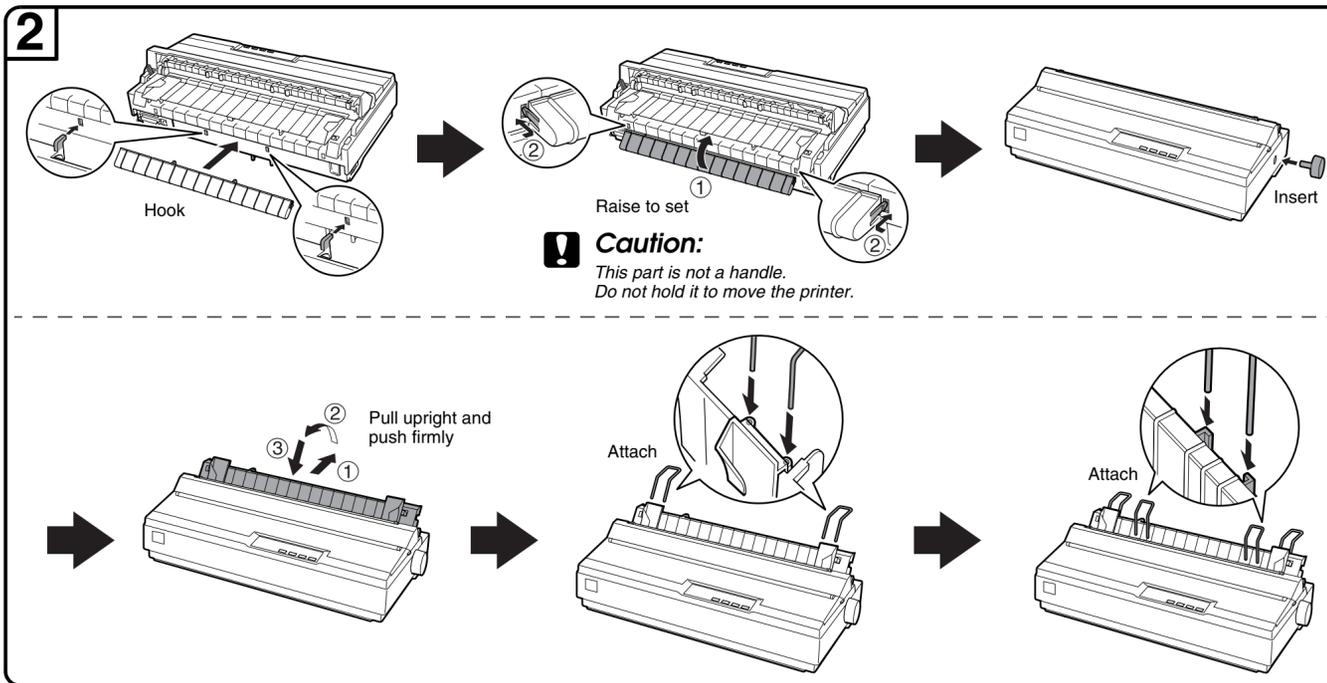


Installing the Ribbon Cartridge

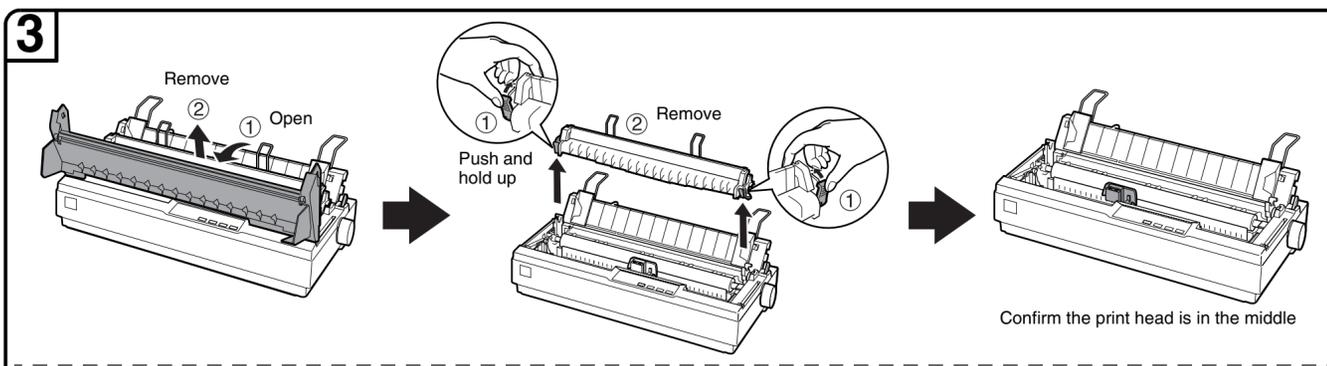


Continued

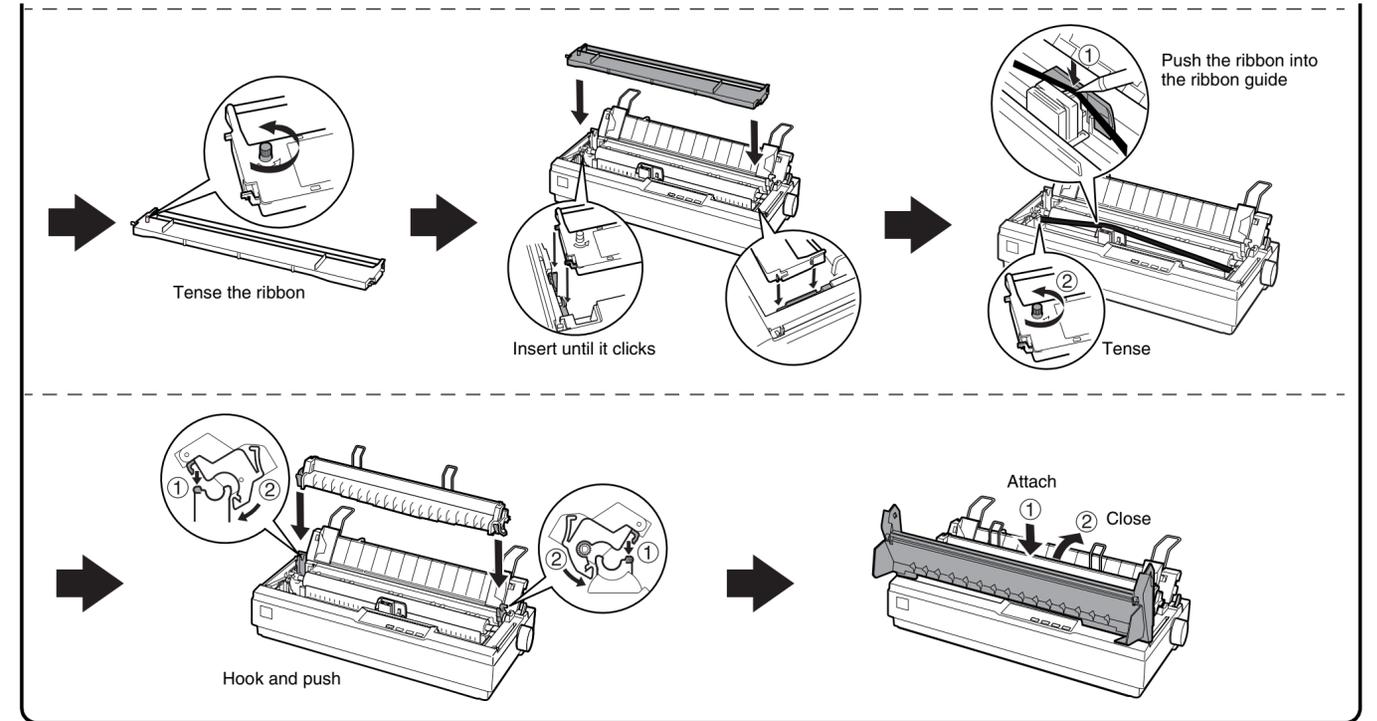

Connecting the Power Cord


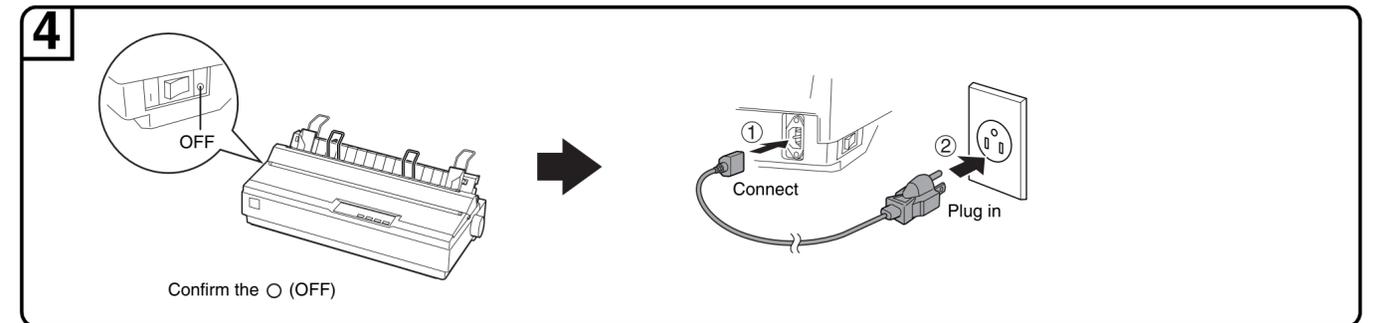


Connecting the Printer to Your Computer

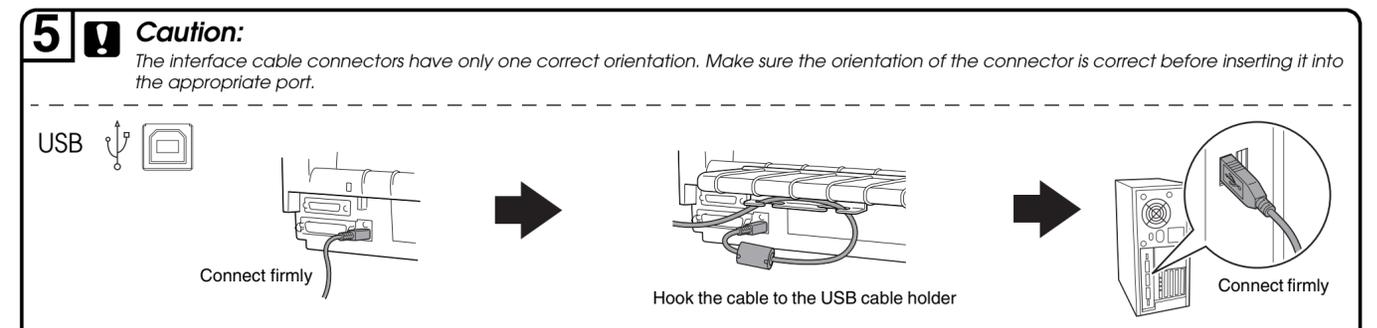


Continued on back

 IEEE1284 (PARALLEL)

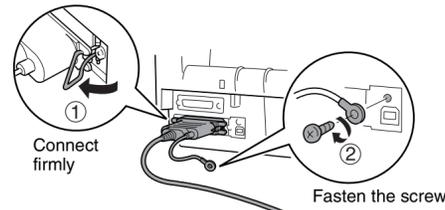

1
Connect firmly

2
Fasten the screw

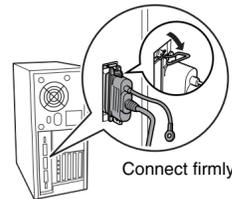


Connect firmly

RS-232C (SERIAL)



Connect firmly and fasten

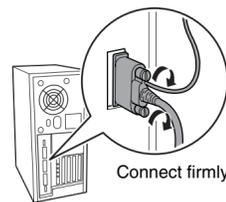

Connect firmly and fasten

Installing the Printer Software

6

Note: Installing the printer software may require administrator privileges. If you have problems, ask your administrator for more information.

Windows 8

You can download the printer software and the utility software (EPSON Status Monitor3) from the Epson web site. Download the software to any directory on your computer, and start installing it.
<http://www.epson.com>

Windows 7

The printer driver in the printer software CD-ROM included with this printer is not compatible with Windows 7. Use the driver included in Windows 7. Perform the following operations to install the driver included in Windows 7.

To install the driver (use the driver included with the operating system)


Make sure both the printer and your computer are turned off, then connect the printer and computer.

1. Turn on the printer.
2. Turn your computer on and start Windows 7.
3. The printer is detected and the driver included in Windows 7 is installed automatically.

Note:

EPSON Status Monitor 2 and EPSON Status Monitor 3 do not support Windows 7. Download the EPSON Status Monitor for the driver included in Windows 7 at the our Web site:
<http://www.epson.com>

Windows Vista/XP/2000/Me/98/NT 4.0

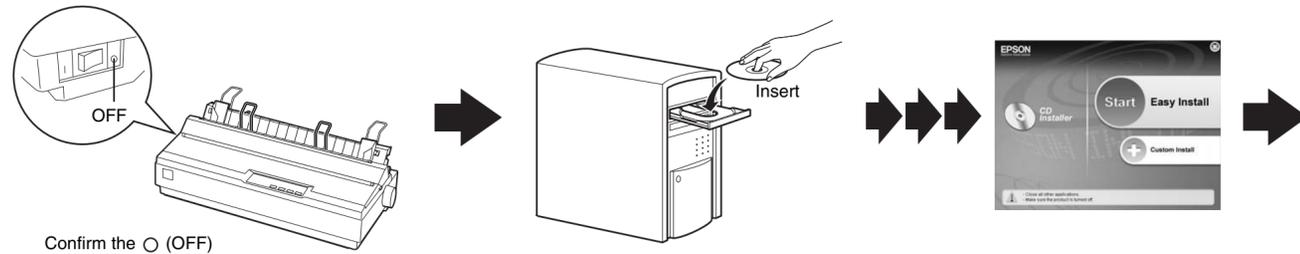


Confirm the **O** (OFF)



Windows Vista only

Follow the instructions

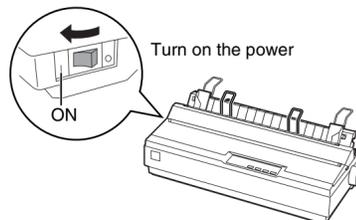

Turn on the power


Note:

- If another EPSON Printer Utilities Setup dialog box appears, click **Retry** and configure the port manually.
- Installing the printer software for Windows Vista, XP, 2000, or Windows NT 4.0 may require administrator privileges. If you have problems, ask your administrator for more information.
- The Windows CD may be required when you install the printer software. If prompted, follow the on-screen instructions and insert the Windows CD.


Loading Paper

7

Printing continuous paper with the push tractor

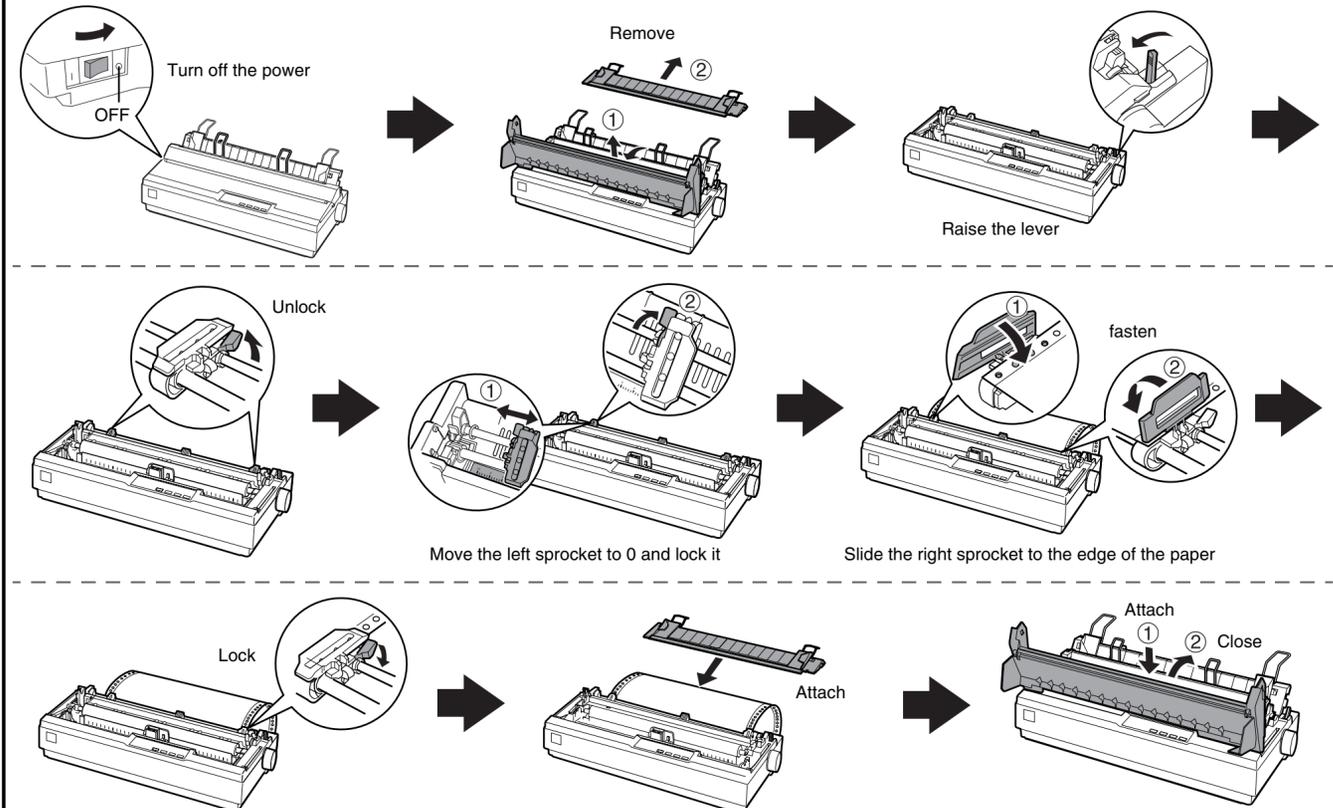

Printing on single sheets

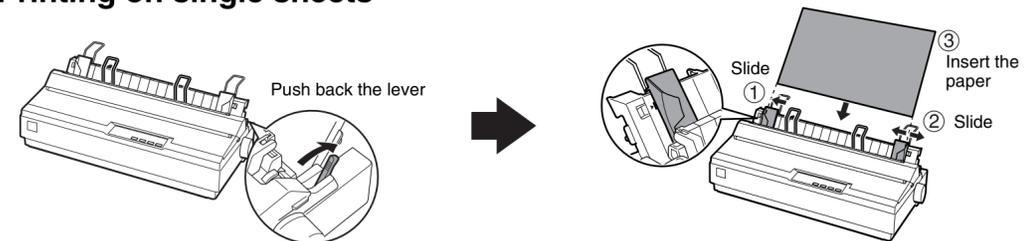

8

Now setup is finished and the printer is ready.

For detailed information about the printer and troubleshooting, refer to the User's Guide by clicking the icon shown below on your computer screen.



If you cannot find the information you require in the User's Guide, visit our Web site:

<http://www.epson.com>

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein. Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions. Seiko Epson Corporation and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation. EPSON is a registered trademark of Seiko Epson Corporation. Microsoft®, Windows®, Windows NT®, and Windows Vista® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Copyright © 2013 Seiko Epson Corporation. All rights reserved.
Printed in XXXXX

Continued