

Beautyrest®

Simple Motion™ Base Owner's Manual and Reference Guide




Actual product appearance and functionality may vary from photographs, illustrations and descriptions included in this manual.

BR_V02

Important Safety Information


Important Safety Information

Read all instructions before using your adjustable base. Save these instructions for future reference.

 **WARNING**

Always unplug the adjustable base from the electrical outlet before servicing any part of the adjustable base. Unplug the adjustable base before cleaning to reduce risk of electrical shock.

Place the adjustable base in a flat position with all motors off, unplug from power source, to safely disconnect.

 **WARNING**

The adjustable base should only be plugged directly into a grounded wall outlet or surge protector (strongly recommended). Improper connection of the equipment can result in the risk of electrical shock, electrical fire, or faulty operation of this adjustable base.


The use of an extension cord is not recommended.

SAFETY

- TO REDUCE THE RISK OF SHOCK, BURNS, FIRE, OR INJURY:
- Keep the power cord away from heated surfaces. Never operate the adjustable base when the air flow to the electric motors is blocked. Do not drop or insert any object into any opening.
 - Only use this adjustable base for its intended use as described in this manual.
 - Do not use accessories/attachments that are not recommended by the manufacturer.
 - Unauthorized modification or failure to use a wall outlet or surge protector could void the electrical portion of your warranty.

ACOUSTICS

- MATERIALS**
- Adjustable base is constructed from various materials including woods, metals, plastics and fabrics. Tension, pressure or movement applied to the frame, platform or shroud through general use may create an audible sound.
- WARNING:** This product is not rated to support weights in excess of 650 pounds inclusive of the mattress and bedding. The adjustable base will structurally support this weight, provided it is evenly distributed across the top surface of the adjustable base.

 **WARNING**


- Keep adjustable bed in a flat position when not in use.
- Stay clear of moving parts while in motion.
- Before adjusting, make sure children and pets are clear of moving parts and are not under adjustable base.
- Do not allow children to operate adjustable base without adult supervision.

- PETS AND CHILDREN:**
- Immediately dispose of all packing materials as it may pose a smothering risk to small children and pets. To avoid injury, do not allow children and small pets to play on or under the adjustable bed. Children should not operate the adjustable base without adult supervision.

- IN-HOME USE:**
- The adjustable base is designed solely for in-home use. This adjustable base was not designed as a hospital bed, and does not comply with hospital standards. Do not use this adjustable base with TENT TYPE oxygen therapy equipment or near explosive gases.




Base Overview

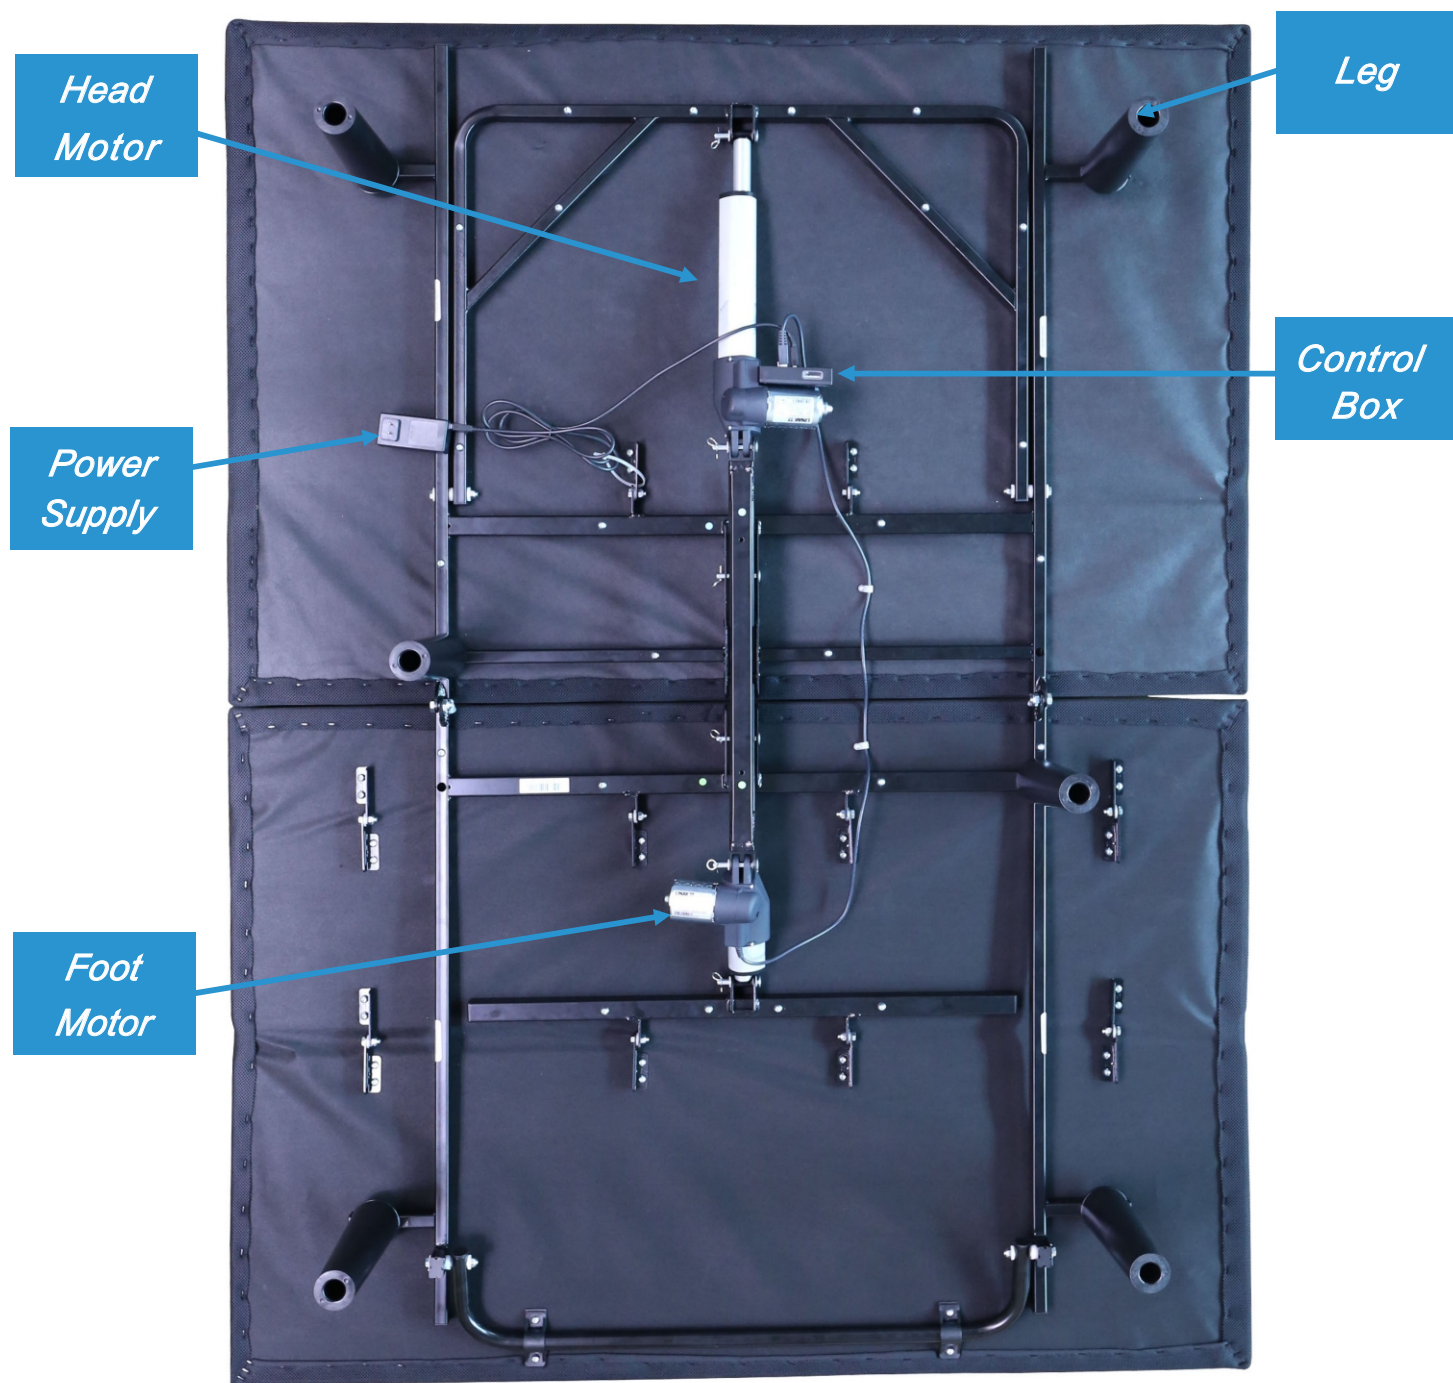

Actual product appearance and functionality may vary from photographs, illustrations, and descriptions included in this manual.

Remote Control

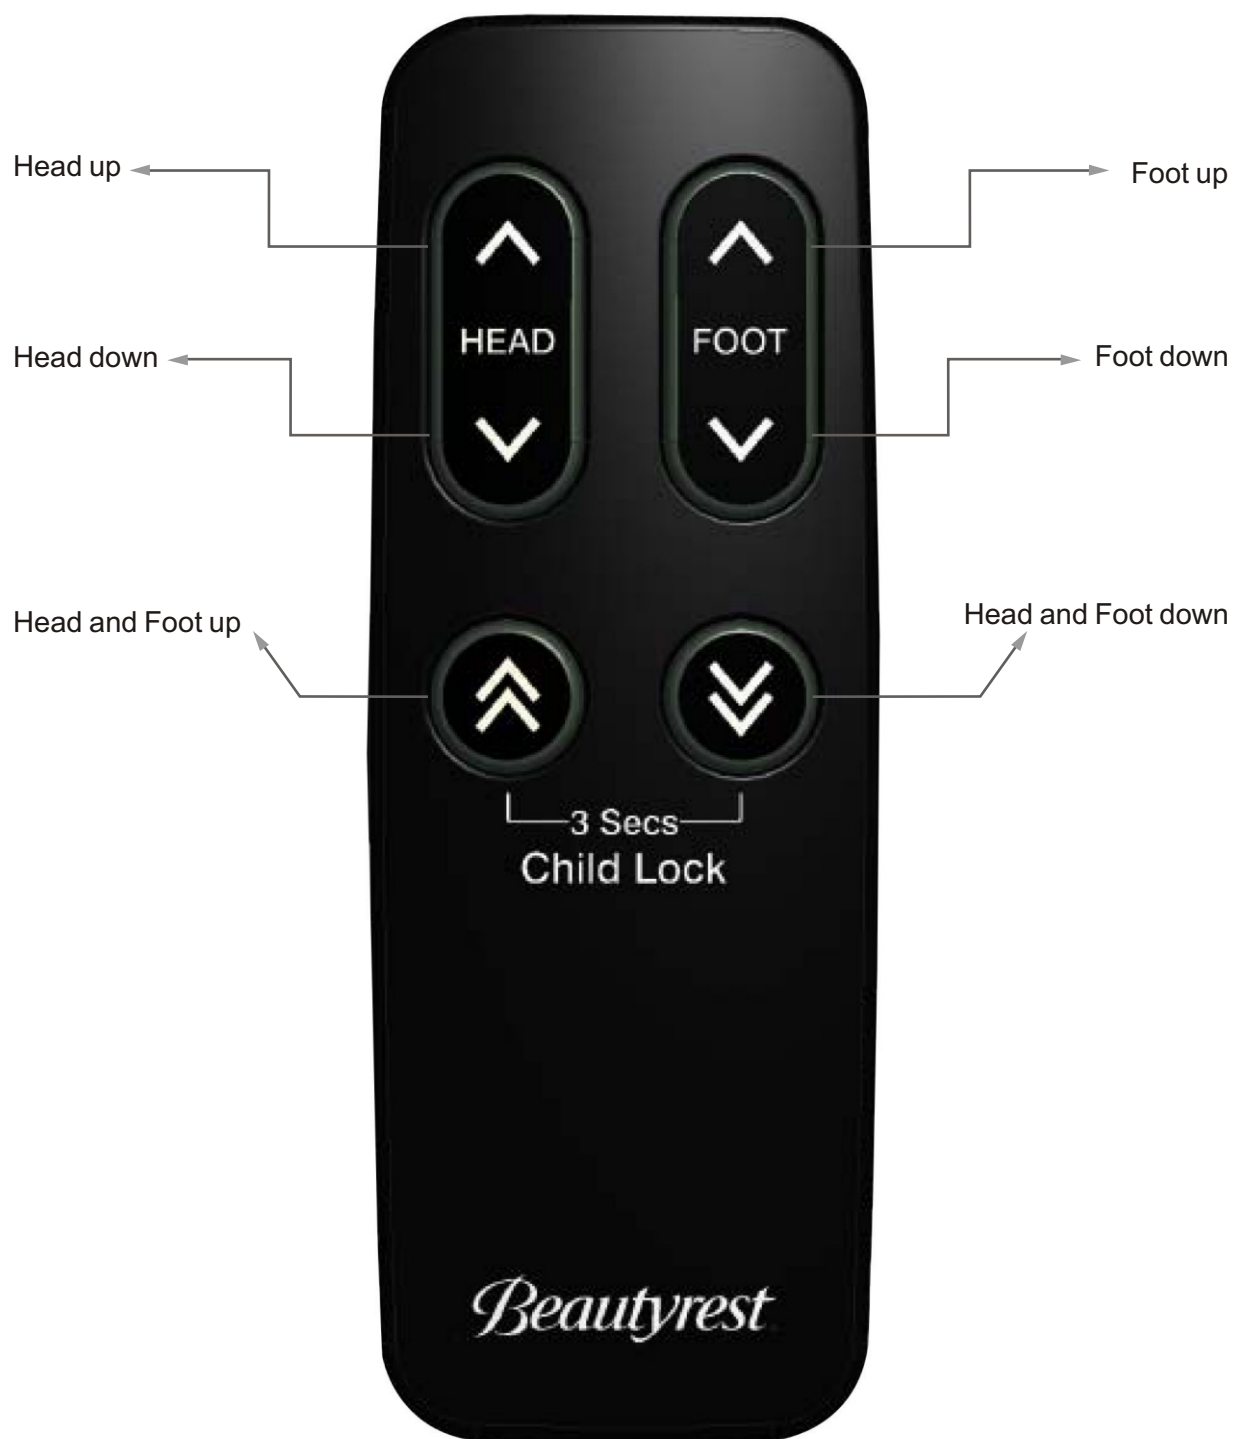


Child lock function

To activate the **Child Lock Feature** hold both 'Head and Foot Up' button and 'Head and Foot Down' button simultaneously for three seconds. Repeat step to deactivate the **Child Lock Feature**.

Quick Reference Guide

This model is not to scale (for illustration only).

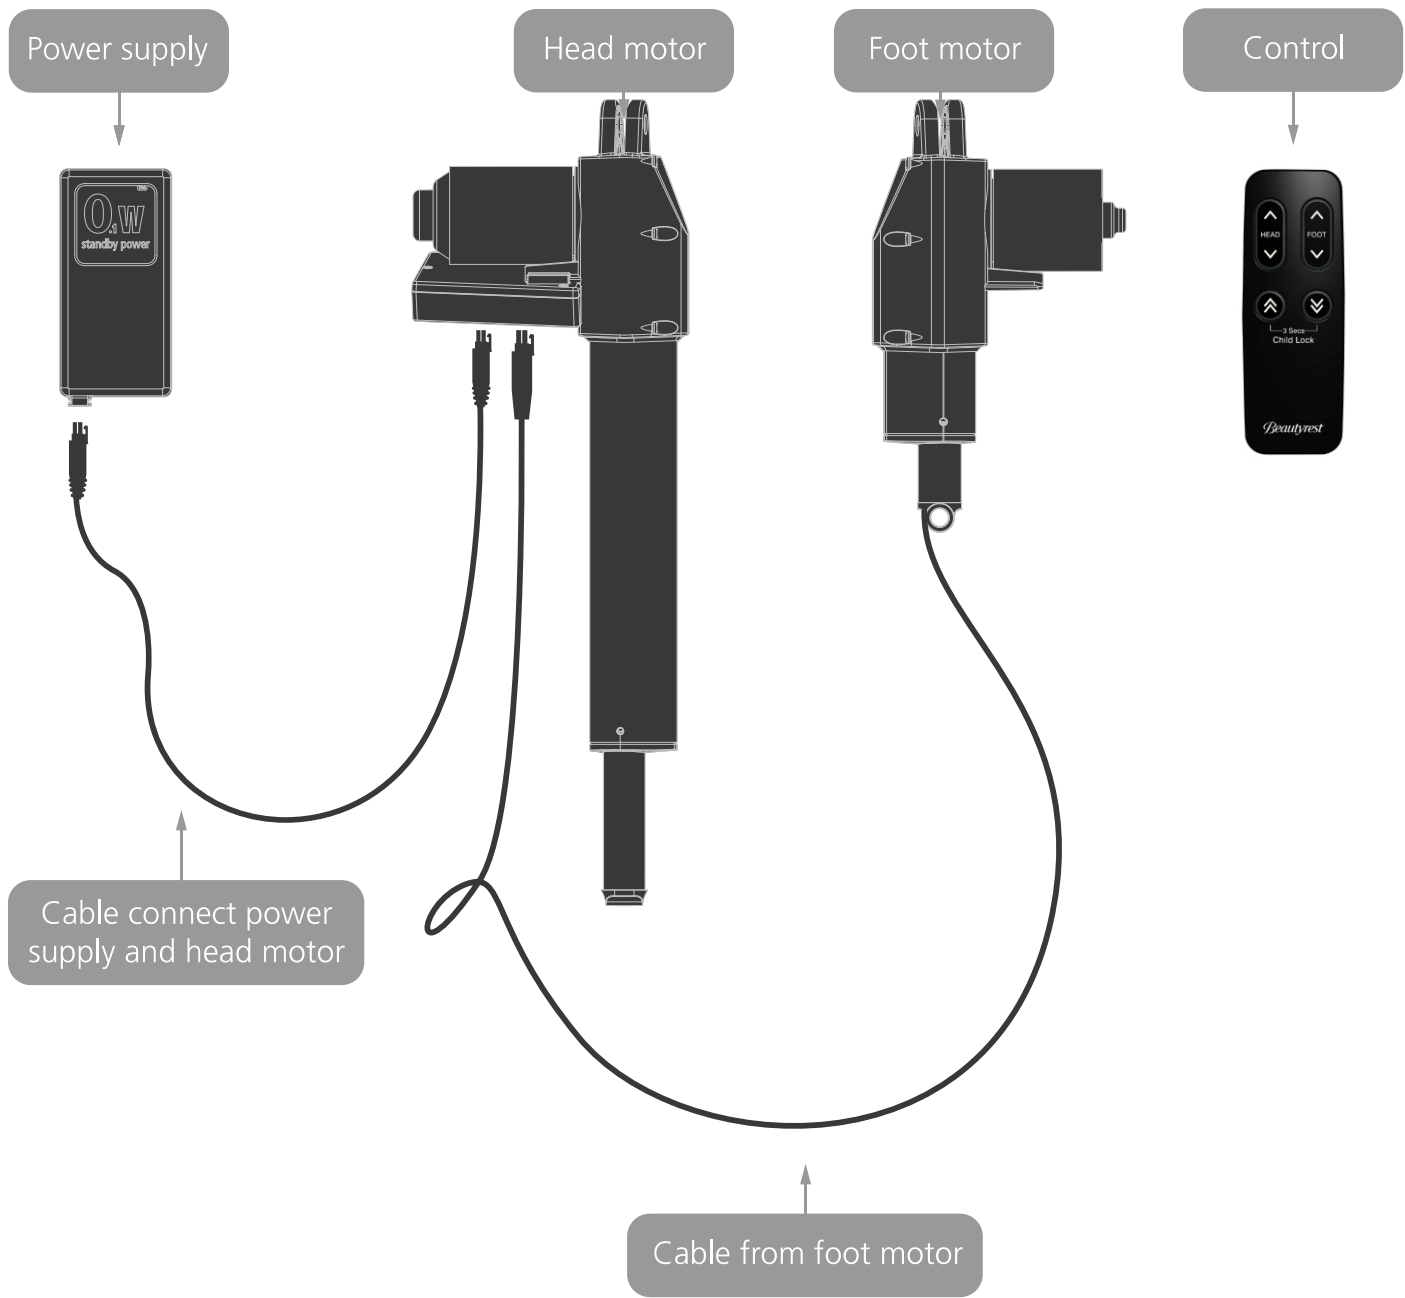

Installation Guide

Always use two people when setting up the adjustable base, moving or flipping the adjustable base.



STEP 1 Unpack Adjustable Base

Place the adjustable base box in a desired location with the bottom of the box facing up. Remove the binding straps and packing materials, making sure not to puncture the box with any sharp objects.



STEP 2 Unfold The Adjustable Base

Important: Be careful of any pinch points while unfolding the adjustable base.

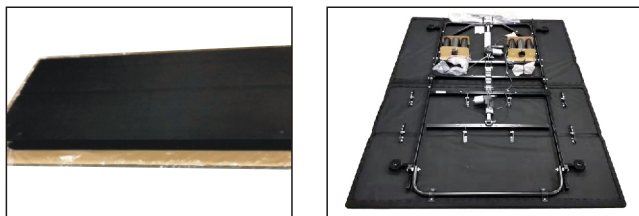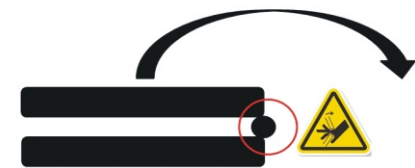

STEP 3 Legs Installation


To install six legs, screw leg into the tapped holes on the frame.

Do not over tighten.




STEP 4 Actuator Bracket Installation


A. Actuator bracket.



B. Remove the original two pins and two R clips placed inside the adjustable base.

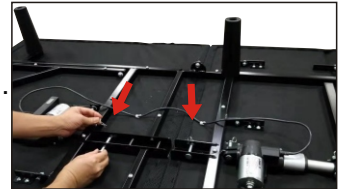


C. Properly install actuator bracket with adjustable base by following correct direction of sticker Green to Green, Blue to Blue.

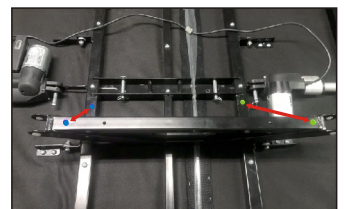

D. Install the actuator bracket on the adjustable base.



E. Re-insert the two pins and two R clips in same holes. Make sure actuator bracket is connected with adjustable base.

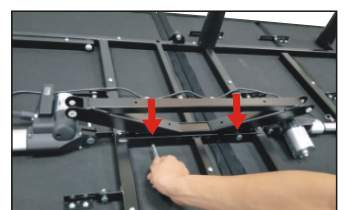

STEP 5 Actuator Installation

A. Connect head and foot actuator. Remove the original pin and R clip placed inside the adjustable base from the bottom of actuator.



B. Re-insert the pin and R clip with actuator bracket. Repeat for foot actuator.




Installation Guide

Always use two people when setting up the adjustable base, moving or flipping the adjustable base.

STEP 6 Flip Adjustable Base

Carefully flip the adjustable base over on to its legs. **Important** : Two people are required to flip the adjustable base. Do not drag across the floor; do not rest frame on its side; excessive pressure may damage legs.

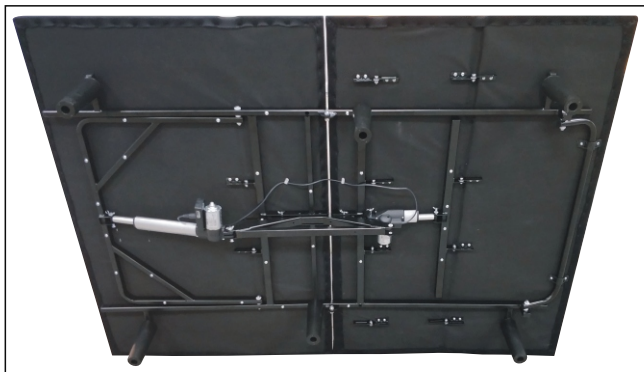

STEP 7 Plug-in Adjustable Base

Plug the power cord into a grounded electrical outlet. **A surge protector is strongly recommended. (Not included)**


STEP 8 Test Remote

The button cell battery is correctly installed in the remote. User just needs to pull out “insulating strip” and then remote is working. Quickly test functions to verify proper setup before placing mattress on adjustable base. Press Head and Foot down to return the adjustable base to a flat position.



STEP 9 Retainer Bar Installation

Install the (2) two corner Retainer Bars to the foot of the adjustable base on the left and right hand sides.

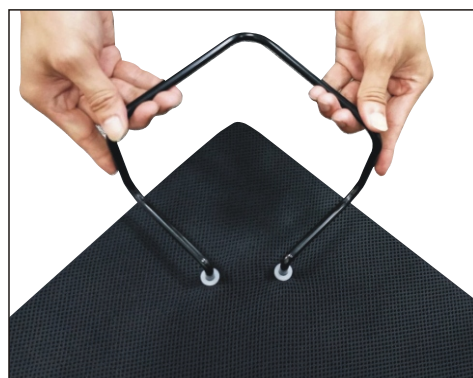

STEP 10 Installation Complete

Place your mattress on top of the adjustable base. Adjustable base installation is now complete.



TROUBLESHOOTING

In the event your adjustable base fails to operate, investigate the issues or concern with possible solutions provided below:

Concern/Issue	Solution
Adjustable base is not powering up or working	<p>Check under the adjustable base to verify the wired connections are secure. Remove any obstructions that may prevent movement of the adjustable base.</p> <p>Plug the adjustable base into a different electrical outlet, or test the current electrical outlet with another appliance (a grounded electrical surge protector is recommended).</p> <p>The electrical circuit breaker could have tripped and needs to be re-set.</p>
Remote is not working or the adjustable base is not responding	<p>On your remote, press the “head-up” and the “foot-up” buttons at the same time. The light on the remote will blink to the control box and actuator, which are paired correctly.</p> <p>If the remote control is not working, please check the batteries and replace if necessary.</p>
Head/Foot Section is not working, stuck in an upright position	<p>If head or foot sections elevate, but do not return to the flat position, the bed movement may be obstructed. Check and remove those obstructions. The head section may be too close to the wall. If so, pull it out.</p> <p>Try unplugging the power cord from the electrical outlet then re-plug.</p>