

SANITIZER DISPENSER STAND

ASSEMBLY INSTRUCTIONS


This page was intentionally left blank.

TABLE OF CONTENTS

Parts Diagram	4
Safety Information	5
Assembly Instructions	6-7
Warranty	8

This manual explains how this product is assembled, used, and maintained. All products are subjected to functional and quality tests before leaving our facility.

PARTS DIAGRAM

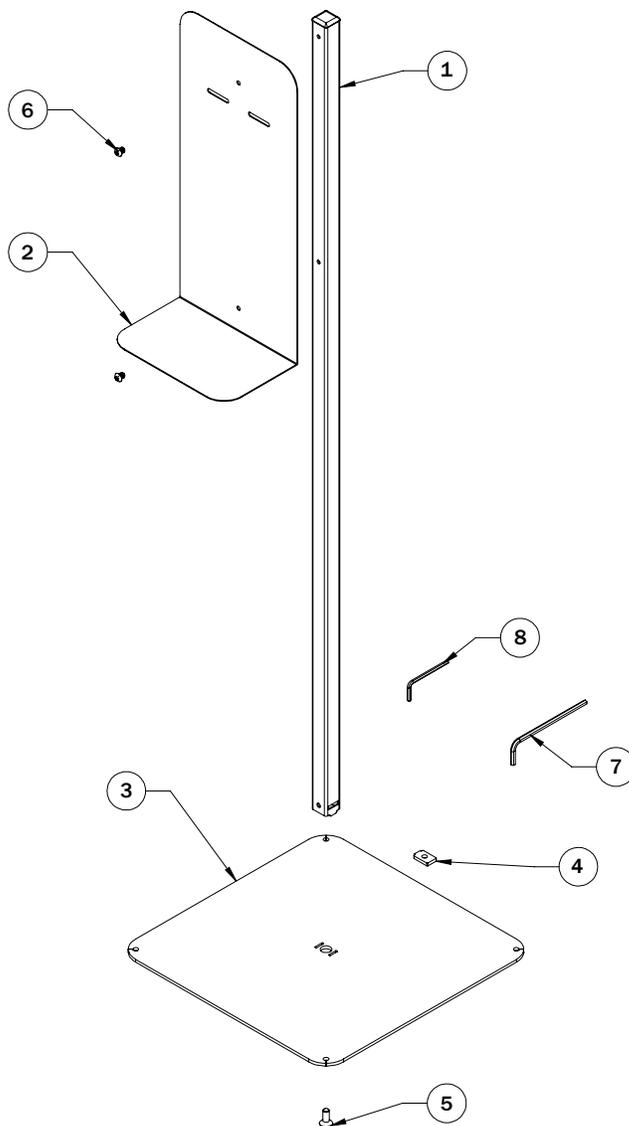

PARTS

Qty/Package

1.	Post	1
2.	Dispenser Mount Bracket	1
3.	Base Plate	1
4.	Nut Insert	1
5.	M8x1.25 Flat Head Screw	1
6.	1/4-20 5/16in screw	1
7.	5mm L Hex Key	1
8.	5/32in L Hex Key	1

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS *Save these instructions.*

DANGER

To keep this product from tipping, place it on a firm and level surface out of the way of pedestrian traffic.

WARNING: To reduce the risk of death, serious injury, or property damage, read and follow this safety information and the provided instructions when assembling this product. Do not change or replace components and accessories provided by BUILT Systems^l.

KEEP AWAY FROM CHILDREN

Do not allow children to use this product unattended.

BEFORE USING THIS PRODUCT

Be sure the components are securely fastened with the appropriate screws.

ASSEMBLY INSTRUCTIONS

The assembly of this product to be made in accordance with this manual.
Changes to the product or improper use may affect the safety, function, and life of your product.

ASSEMBLY OVERVIEW



1. Install nut insert
2. Mount base plate
3. Attach dispenser mount bracket

If you have any difficulty assembling this unit, or need to order replacement parts, please contact our Customer Service department. Use the parts diagram on page 4 as a reference.

1

INSTALL NUT INSERT

Install the nut insert into the post through the larger opening, making sure it sits flush.

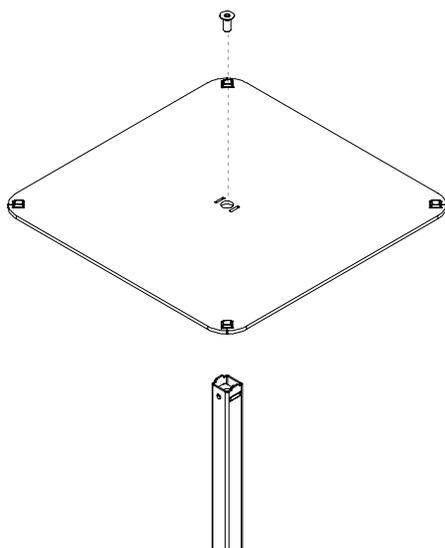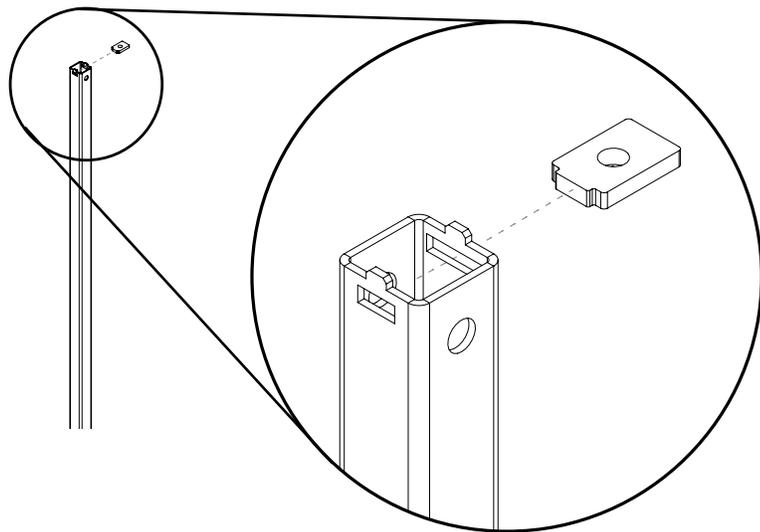

2


MOUNT BASE PLATE

With the nut insert pushed in, place the base plate on top of the post, lining up with the appropriate guiding slots. Ensure the rubber pads on the base plate are facing away from the post. Mount the base plate to the post using the provided M8x1.25 flat head screw and 5mm L hex key.

3

ATTACH THE DISPENSER MOUNT BRACKET

With the mounting holes lined up with the post, fasten the dispenser mount bracket to the post using the provided 1/4-20 screws and 5/32 L hex key.

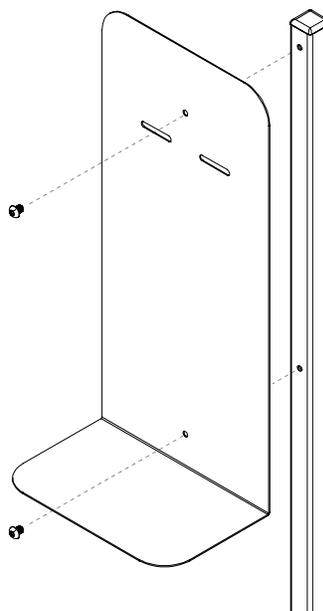

CUSTOMER SERVICE

If you have any problems with your unit, please contact our service department.

PHONE: 1-616-795-4569
INFO@BUILTSYSTEMS.NET

WARRANTY

CONTACT YOUR SALES REPRESENTATIVE FOR WARRANTY INFORMATION

BUILT Systems

11511 James Street
Holland, MI 49424
616-795-4569
info@builtsystems.net
www.builtsystems.net



End of life cycle: Once product is disassembled, all steel components can be recycled at your local metal collector.

BUILT SYSTEMS

Made in Michigan, BUILT products provide manufacturers with essential solutions for the plant floor—products with a combination of attributes and benefits offered nowhere else.

Our manufacturing facility is lean, clean, visual, and streamlined. We design and build highly customized products using advanced machinery and design our own height adjustable products and solutions. Some of our in-house capabilities include:

- Laser Cutting
- Bending
- Welding
- Assembly
- Powder Coating
- Quality Control

To reduce our carbon footprint, eliminate import costs, and support the U.S. economy, we source our materials close to home. BUILT employs American ingenuity to solve problems and create equipment that is better at every level.

BUILT®
S y s t e m s